



MicoFlame® Series 2

Installation and Service Manual

Gas Fired Commercial Copper Tube Boilers
Non-Condensing Hydronic Heating Models MFH800 thru MFH2000
Condensing Hydronic Heating Models MFH802 thru MFH2002
Non-Condensing Hot Water Heating Models MFW800 thru MFW2000
Condensing Hot Water Heating Models MFW802 thru MFW2002



H



HLW



WARNING

If the information in these instructions is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance,
- Do not touch any electrical switch; do not use any phone in your building,
- Immediately call your gas supplier from a neighbour's phone. Follow the gas supplier's instructions,
- If you cannot reach your gas supplier, call the fire department.

A Qualified installer, service agency or the gas supplier must perform installation and service.

WARNING

Do not store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other appliance.

TO THE INSTALLER: After installation, these instructions must be given to the end user or left on or near the appliance.

TO THE END USER: This booklet contains important information about this appliance. Retain for future reference.

Table of Contents

1.	GENERAL INSTRUCTIONS	1
2.	WARRANTY	1
3.	BOILER LOCATION	1
4.	DIMENSIONS	2
5.	PROVIDE AIR FOR COMBUSTION AND VENTILATION	2
6.	ELECTRICAL WIRING	2
7.	STAGING OPERATION	3
8.	GAS SUPPLY AND PIPING	3
9.	VENTING	4
9.1	REMOVAL OF EXISTING APPLIANCE	5
9.2	APPROVED VENTING MATERIALS	6
9.3	OUTDOOR VENTING	7
9.4	SIDEWALL VENTING	7
9.5	OUTDOOR AIR KIT	8
9.6	FILTER KIT	8
9.7	STANDARD VENTING	9
9.8	VENTING FOR CONDENSING APPLICATION	9
9.9	COMMON VENTING	10
9.10	SIDEWALL CLEARANCE SPECIFICATIONS	11
10.	ACCESSORIES	12
11.	FREEZE PROTECTION	14
12.	WARNING REGARDING CHILLED WATER SYSTEMS	14
13.	PIPING OF BOILER TO SYSTEM	14
14.	PLACING BOILER IN OPERATION	16
15.	INSTRUMENTATION AND CONTROLS	17
16.	MICROFLAME SERIES 2 CONTROL PANEL	17
16.1	MODE 1 & 2: SETPOINT OPERATION: VIEW DISPLAY	18
16.2	MODE 1 & 2: SETPOINT OPERATION: ADJUST DISPLAY	20
16.3	MODE 3: SETPOINT OPERATION: VIEW DISPLAY	20
16.4	MODE 3: SETPOINT OPERATION: ADJUST DISPLAY	21
16.5	MODE 4 & 5: OUTDOOR RESET OPERATION: VIEW DISPLAY	22
16.6	MODE 4 & 5: OUTDOOR RESET OPERATION: ADJUST DISPLAY	24
16.7	MODE 6: EXTERNAL SEQUENCER OPERATION: VIEW DISPLAY	25
16.8	MODE 6: EXTERNAL SEQUENCER OPERATION: ADJUST DISPLAY	26
16.9	MODE 7 & 8: EXTERNAL TEMPERATURE TARGET OPERATION: VIEW DISPLAY	26
16.10	MODE 7 & 8: EXTERNAL TEMPERATURE TARGET OPERATION: ADJUST DISPLAY	27
17.	IGNITION SYSTEM SAFETY SHUT-OFF DEVICE	28
18.	LOW WATER TEMPERATURE SYSTEMS	28
19.	INSTANTANEOUS WATER HEATER	29
20.	CONDENSING HEAT RECOVERY MODULE	29
21.	PILOT AND MAIN BURNER FLAMES	31
21.1	MAIN BURNER	31
21.2	REMOVAL OF COMBUSTION CHAMBER LINING	33

21.3	<i>PILOT BURNER</i>	33
22.	OPERATION AND SERVICE	34
23.	LIGHTING INSTRUCTIONS	35
24.	TROUBLE SHOOTING GUIDE	36
25.	TYPICAL GAS TRAIN	36
26.	ELECTRICAL DIAGRAMS	37
27	EXPLODED VIEW	40
28	MICOFLAME REPLACEMENT PARTS LIST	43

1. GENERAL INSTRUCTIONS

The installation of this heater must conform to the requirements of the authority having jurisdiction or, in the absence of such requirements, to the latest or current as amended National Fuel Gas Code, ANSI Z223.1 or CAN/CGA B149 Installation Codes. All electrical wiring must be done in accordance with the requirements of the authority having jurisdiction or, in the absence of such requirements, with the National Electrical Code, ANSI/NFPA 70 or the Canadian Electrical Code Part I, CSA C22.1 Electrical Code.

Vent installations must be in accordance with Part 7, Venting of Equipment, of the latest edition or the current as amended National Fuel Gas Code, ANSI Z223.1, or Section 7, Venting Systems and Air Supply for Appliances, of the CAN. CGA B149, Installation Codes and applicable provisions of the local building codes.

When required by the authority having jurisdiction, the installation must conform to the Standard for Controls and Safety Devices for Automatically Fired Boilers, ANSI/ASME CSD-1.

The qualified installer shall instruct the end user in the safe and correct operation of this appliance and shall ensure that the heater is in safe working order prior to leaving the job site.

2. WARRANTY

Factory warranty shall apply only when the boiler is installed in accordance with local plumbing and building codes, ordinances and regulations, the printed instructions provided with it and good industry practices.

Excessive water hardness causing a lime build-up in the copper coils or tubes is not a fault of the boiler. Consult the factory for recommendations for use in hard water areas. Damage to the heat exchanger as a result of scaling or corrosive water conditions in non-warrantable.

Using or storing corrosive chemicals in the vicinity of this boiler can rapidly attack the copper tubes and coils and voids warranty.

The primary heat exchanger of this boiler is intended to operate under non-condensing conditions. Inlet temperatures must be maintained at 110°F or higher. Warranty is void if the primary heat exchanger is allowed to operate in condensing mode.

Damage caused by freezing or dry firing voids warranty.

This boiler is not to be used for temporary heating of buildings under construction.

3. BOILER LOCATION

Install this boiler in a clean, dry location with adequate air supply and close to a good vent connection. The boiler must not be installed on carpeting. Do not locate this boiler in an area where it will be subject to freezing.

The boiler is suitable for installation on combustible flooring and should be located close to a floor drain in an area where leakage from the boiler or connections will not result in damage to the adjacent area or to lower floors in the structure. If necessary, a suitable drain pan should be installed under the boiler.

If the boiler is installed above the level of the building's radiation system, a low water cutoff device must be installed in the boiler outlet at the time of installation. Some local codes require the installation of a low water cutoff on all systems. Locate the boiler so as to provide adequate clearance for inspection and service all around the unit. It is recommended that 24" be provided for the top and sides and 48" for the front.

This boiler is suitable for alcove installation with minimum clearances to combustibles as follows:

Table 1: Clearances to combustibles

TOP:	12"
SIDES:	12"
REAR:	12"
VENT:	6"
FLOOR:	0"

4. DIMENSIONS

Figure 1: MF 800-2000

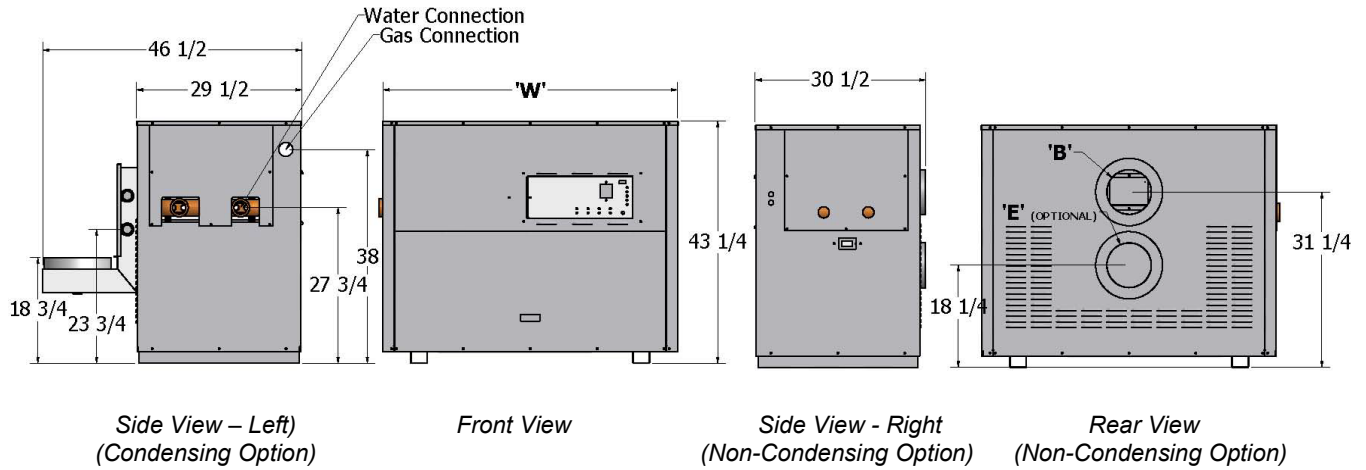


Table 2: Dimensions

Model	'W"	Water Connection	Gas Connection	'B' Dia. Venting*			'E' Dia.
				Outdoor	Sidewall or Condensing	Standard	Air Inlet
MF800	45 3/4"	2 1/2"	1"	8"	8"	10"	8"
MF1000	52 3/4"	2 1/2"	1 1/4"	8"	8"	10"	8"
MF1200	62"	2 1/2"	1 1/4"	10"	10"	12"	10"
MF1400	71 1/4"	2 1/2"	1 1/4"	10"	10"	12"	10"
MF1600	80 3/4"	2 1/2"	1 1/2"	12"	12"	14"	12"
MF1800	89 3/4"	2 1/2"	1 1/2"	12"	12"	14"	12"
MF2000	99"	2 1/2"	1 1/2"	12"	12"	14"	12"

* Non-condensing models are shipped with standard vent opening size unless sidewall vent is specified

5. PROVIDE AIR FOR COMBUSTION AND VENTILATION

Provisions for combustion and ventilation air are to be in accordance with the section "Air for Combustion and Installation", Of the National Fuel Gas Code, ANSI Z223.1/NFPA 54, or clause 8.2, 8.3, 8.4 of "Natural Gas and Propane Installation Code", CAN/CSA B149.1.2, or applicable provisions of the local building codes.

If the heater is to be installed near a corrosive or potentially corrosive air supply, the heater must be isolated from it and outside air should be supplied as per code.

Potentially corrosive atmospheres will result from exposure to permanent wave solution, chlorinated waxes and cleaners, chlorine, water softening chemicals, carbon tetrachloride, halogen based refrigerants, Freon cleaning solvents, hydrochloric acid, cements and glues, masonry washing materials, antistatic fabric softeners, dry cleaning solvents, degreasing liquids, printing inks, paint removers, etc.

6. ELECTRICAL WIRING

All electrical wiring to the boiler must be electrically bonded to ground in accordance with the requirements of the authority having jurisdiction or, in the absence of such requirements, with the National Electrical Code, ANSI/NFPA 70 or the Canadian Electrical Code Part I, CSA C22.1, Electrical Code.

Provide disconnecting means of sufficient rating within sight of the boiler. These heaters require an 115V, 60Hz supply. Depending on the pump used, a 15-amp breaker is usually sufficient.

Electrical connections must be made so that the circulator will operate before the gas valve can open. At no time may the control system allow the burner to fire without water flowing in the system.

Use minimum 18-gauge conductor for 24-volt field wiring to boiler. Splicing of wires is not recommended.

Use sealed tight conduit suitable for outdoor use for outdoor installations.

Use terminal strip provided inside control panel for remote controller

Refer to wiring diagram provided with boiler.

7. STAGING OPERATION

Staging of the MicoFlame series 2 is dependent on the number of burners supplied. Models 800 and 1000 are supplied with a single burner and are available as on/off and two stages. Models 1200 through 2000 are supplied with two burners and are available as on/off, 2-stage, 3-stage, and 4-stage.

Each burner is supplied with a dedicated airflow proving signal and separate proved pilot ignition system. All fans must be running in order for the appliance to proceed to trial for ignition.

MicoFlame series 2 supplied with more than one burner may use burners that are not of identical size in order to accommodate fans within the space allocated. In case where burners are not identical, the right side burner will be the one with the higher input.

Each MicoFlame series 2 is supplied with the appropriate wiring diagram showing the actual staging sequence provided as well as any special controls or options requested.

When converting multiple MicoFlame series 2 appliances to an external sequencing control it is absolutely necessary to program the sequencer properly by entering the number of stages provided on the appliance. In this way the sequencer will lead/lag or rotate the boilers properly.

A full diagnostics panel is provided on the MicoFlame series 2. On a call for heat, status lights will light up if the particular safety is working properly. Once all safeties have been proved, the boiler will proceed to trial for ignition and will then sequentially bring on the burner stages (and the corresponding lights). If the safety proving sequence does not proceed to completion, the first safety light to remain off will indicate the cause of the problem. All other lights below the problem indicator light will also remain off.

Burner staging is arranged to allow a minimum firing rate of no less than 50% in order to minimize possibility of condensation in the venting. Staging of burners for models 1200 through 2000 is as follows:

Table 1: Burner Firing Rates

Two Stage	Left Burner	Right Burner
Stage 1	Low Fire	Low Fire
Stage 2	High Fire	High Fire

Three Stage *	Left Burner	Right Burner
Stage 1	Low Fire	Low Fire
Stage 2	Low Fire	High Fire
Stage 3	High Fire	High Fire

* Recommended for Models 1400 and 1600

Four Stage	Left Burner	Right Burner
Stage 1	Low Fire	Low Fire
Stage 2	Low Fire	Low Fire
Stage 3	Low Fire	High Fire
Stage 4	High Fire	High Fire

8. GAS SUPPLY AND PIPING

This boiler is intended to operate at inlet gas pressures not exceeding 1/2 PSI (14"W.C.) when firing with natural gas. If higher pressures are present, consult the gas company for correction.

When pressure testing the gas supply piping at pressures above ½ PSI, the boiler and its individual gas shut-off valve must be disconnected from the supply piping.

A sediment trap must be provided upstream of the gas controls.

Provide a trap (drip leg) as close to the heater as possible.

Install a ground joint union and manual shut-off valve in the gas line near the heater to allow easy removal of the gas control assembly.

Provide gas pressures at inlet to appliance in accordance with the limits in the table below:

	PROPANE	NATURAL GAS
Minimum Running (inches W.C.)	10	5
Maximum Lockup (inches W.C.)	11	7

The gas supply line must be of adequate size to prevent undue pressure drop and must never be smaller than the size of the connection on the heater. Sizing based on Table 2 is recommended.

Before operating the boiler, the complete gas train and all connections must be tested using soap solution.

Table 3: Recommended Gas Pipe Size

Input Btu/Hr	DISTANCE FROM NATURAL GAS METER OR PROPANE SECOND STAGE REGULATOR					
	0-100 FT		100-200 FT.		200-300 FT.	
	NAT.	L.P.	NAT.	L.P.	NAT.	L.P.
800,000	2"	1 ½"	2 ½"	2"	2 ½"	2"
1,000,000	2"	1 ½"	2 ½"	2"	2 ½"	2"
1,200,000	2 ½"	2"	2 ½"	2"	3"	2 ½"
1,400,000	2 ½"	2"	2 ½"	2"	3"	2 ½"
1,600,000	2 ½"	2"	3"	2 ½"	3"	2 ½"
1,800,000	2 ½"	2"	3"	2 ½"	3"	2 ½"
2,000,000	2 ½"	2"	3"	2 ½"	3"	2 ½"

9. VENTING

- Provisions for combustion and ventilation air are to be in accordance with the section "Air for Combustion and Installation", Of the National Fuel Gas Code, ANSI Z223.1/NFPA 54, or clause 8.2, 8.3, 8.4 of "Natural Gas and Propane Installation Code", CAN/CSA B149.1.2, or appliance provisions of the local building codes.
- The distance of the vent terminal from adjacent buildings, windows that open and building openings MUST comply with the latest edition of the National Fuel Gas Code, ANSI Z223.1, in Canada, the latest edition of CAN/CGA Standard B149 Installation Code for Gas Burning Appliances and Equipment.
- For US Installations, the vent for this appliance shall not terminate: i) over public walkways; or ii) near soffit vents or crawl space vents or other areas where condensate or vapor could create a nuisance or hazard or cause property damage; or iii) where condensate vapor could cause damage or be detrimental to the operation of regulators, relief valves, or other equipment.
- Vent connection is made directly to the flue outlet opening on the back of the unit. The connection from the appliance vent to the stack must be made as direct as possible.
- Appliances for outdoor installation are intended to vent using a listed vent cap. For indoor installations venting must be in accordance with Part 7, Venting of Equipment, of the National Fuel Gas Code, ANSI Z223.1, or Section 7, Venting of Equipment and Air Supply for Appliances, of the CAN/CGA B149, Installation Codes, or applicable provisions of the local building codes.
- Vent connectors serving appliances vented by natural draft shall not be connected into any portion of mechanical draft systems operating under positive pressure.
- Horizontal runs of vent pipe shall be securely supported (approximately every 4 feet) to prevent sagging and maintain a minimum upward slope of ¼" per foot from the appliance to the vent terminal to provide drainage of the vent towards the nearest drain or the vent termination. The venting system must be installed with a means of condensate disposal.
- The weight of the venting system must not rest on the unit. Adequate support of the venting system must be provided in

compliance with local codes and other applicable codes.

- All connections should be secured and sealed per the vent manufacturers specifications. When a Positive vent system is disconnected for any reason, the flue must be reassembled and resealed according to the vent manufacturer's instructions.
- Do not use an existing chimney as a raceway if another appliance or fireplace is vented through the chimney.

9.1 REMOVAL OF EXISTING APPLIANCE

When an existing appliance is removed from a common venting system, the common venting system is likely to be too large for proper venting of the appliances remaining connected to it. At the time of removal of an existing appliance, the following steps must be followed with each appliance remaining connected to the common venting system placed in operation, while the other appliances remaining connected to the common venting system are not in operation.

- Seal any unused openings in the common venting system.
- Visually inspect the venting system for proper size and horizontal pitch and determine that there is no blockage, restriction, leakage, corrosion or other deficiency, which could cause an unsafe condition.
- Insofar as is practical, close all building doors and windows and all doors between the spaces in which the appliances remaining connected to the common venting system are located and other spaces of the building. If applicable turn on the clothes dryers and any appliances not connected to the common venting system. Turn on any exhaust fans, such as range hoods and bathroom exhausts, so they will operate at maximum speed. Do not operate a summer exhaust fan. Close fireplace dampers.
- Place in operation the appliance being inspected. Follow the lighting instructions. Adjust thermostat so that appliance operates continuously.
- If provided, test for spillage at the draft control device relief opening after 5 minutes of main burner operation. Use a cold mirror, or the flame of a match or candle.
- Test for spillage at the draft control device relief opening after 5 minutes of main burner operation.
- After it has been determined that each appliance remaining connected to the common venting system properly vents when tested as outlined above, return doors, windows, exhaust fans, fireplace dampers and any other gas-burning appliance to their previous condition of use.
- Any improper operation of the common venting system should be corrected so that the installation conforms to the National Fuel Gas Code, ANSI Z223.1 and/or CAN/CGA B149, Installation Codes. When resizing any portion of the common venting system, the common venting system should be resized to approach the minimum size as determined using the appropriate tables in Part 11 of the National Fuel Gas Code, ANSI Z223.1 and /or CAN/CGA B149, Installation Codes.


Heat exchanger surfaces and vent piping should be checked every six months for deterioration and carbon deposits. Remove all soot or other obstructions from the chimney and flue, which might impede draft action. Replace any damaged or deteriorated parts of the venting system.

A qualified service technician should follow this procedure when inspecting and cleaning the heat exchanger and vent pipe.

1. Turn off electrical power and close main manual gas shut-off and allow boiler to cool down
2. Remove the vent pipe running to chimney. Remove top outer panel and flue collector access panel. Check heat exchanger, vent and chimney for obstruction and clean as necessary.
3. Remove burner from boiler and vacuum the burner, and the heat exchanger. If heat exchanger is excessively dirty it may be necessary to remove it from the boiler and wash it down with proper detergent cleaner. Be aware that the combustion chamber base is insulated with ¼" thick ceramic paper. If this material is damaged or displaced it must be replaced before starting up the boiler.
4. Reinstall parts removed in steps 2 and 3. Be sure that vent pipe has proper pitch and is properly sealed. Repair or replace any gaskets, which may have been damaged in steps 2 and 3.
5. **CAUTION:** When replacing the burner be careful to fully engage the back of the burner box into the retaining slot in the combustion chamber base. Failure to properly locate the burner will result in erratic flame operation with the possibility of delayed ignition on light off.
6. Restore electrical power and gas supply to boiler.
7. Place boiler in operation using lighting instructions provided.
8. While the boiler is operating, check for flue gas leaks and proper vent operation. Seal any flue gas leaks using appropriate gasket or sealing material. Carefully examine the flue collector access panel and heat exchanger ends.

The MicoFlame series 2 is a category I or III, 85% efficient when supplied as a non-condensing appliance. When supplied with the optional condensing cartridge, the MicoFlame series 2 is 95% efficient and is considered to be a category II or IV appliance. Three venting options are available for this boiler. See Figure 2 for details. (Please refer to Table 2 for vent dimensions)

Figure 2: Venting Configurations

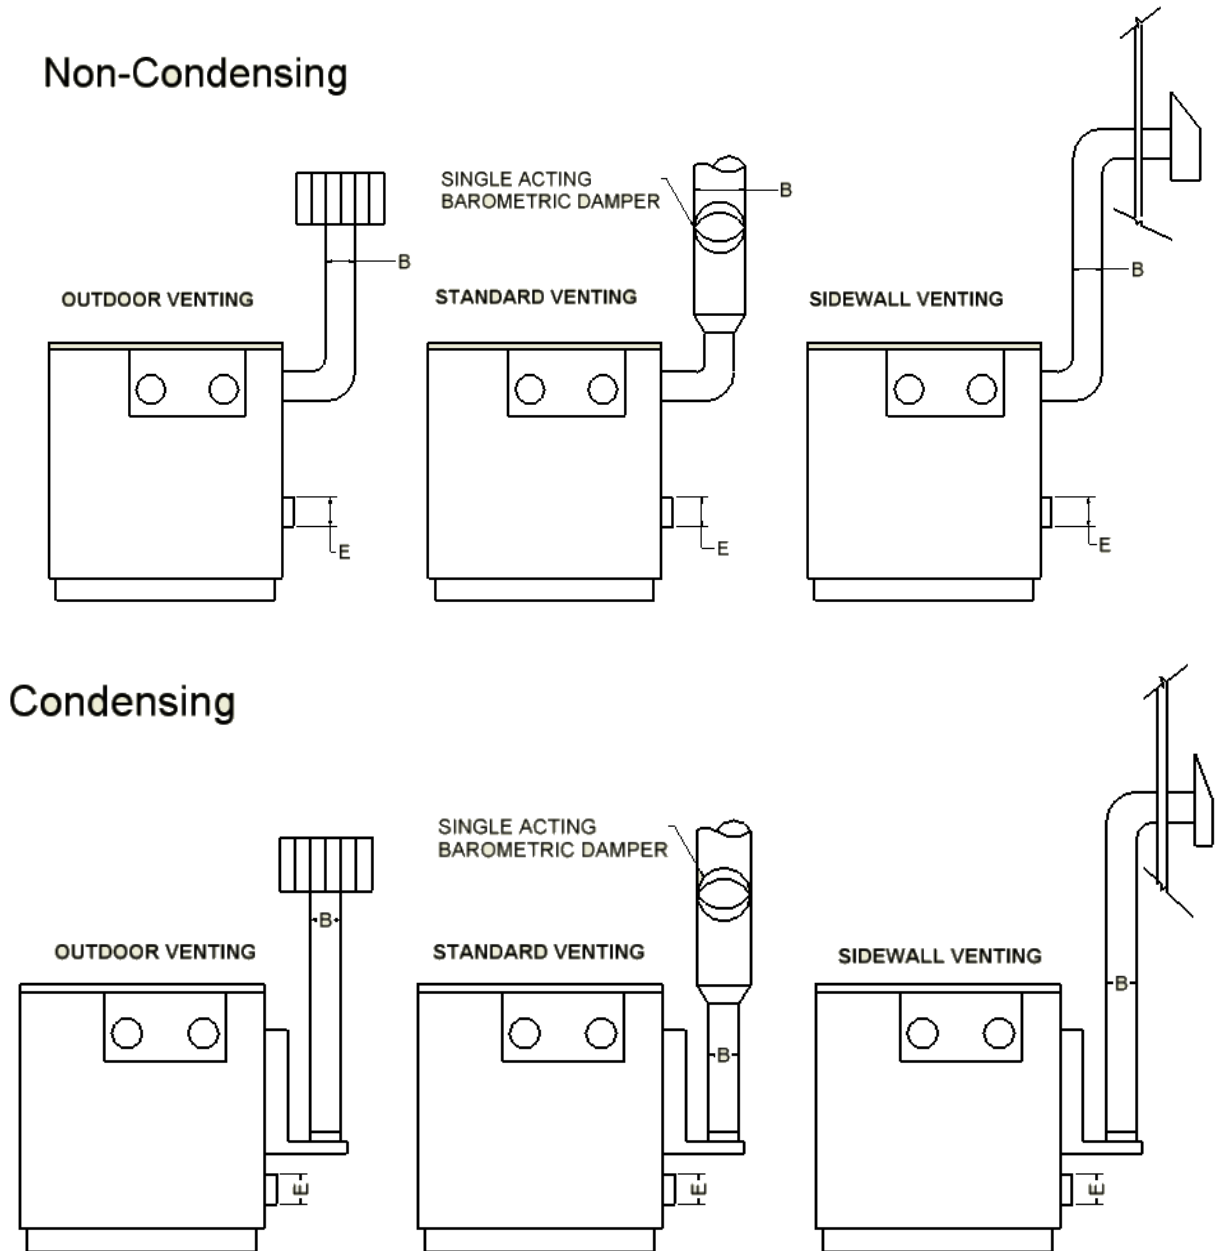

9.2 APPROVED VENTING MATERIALS

Vent material selection for non-condensing Category I Installations

- 1) "B" Type
- 2) Stainless Steel Single Wall (required when operating appliance at low fire for long periods)
- 3) "C" Vent (Canada ONLY)
- 4) Equivalent or higher rated than above

Vent material selection for Category III Installations

- 1) Corrosion resistant stainless steel single wall
- 2) AL29-4C or equivalent, single or double wall

Vent material selection for condensing applications

Camus condensing boilers/water heaters are category II or IV appliances and the exhaust vent material must be UL/ULC listed for use with category IV appliances operating under positive pressure in condensing flue gas service.

Currently, manufactured prefabricated UL/ULC listed vents of AL29-4C or 316L stainless steel must be used with the Camus condensing boiler/water heaters.

NOTE

- 1) Use of cellular core PVC (ASTM F891), cellular core CPVC or Radel® (polyphenosulfone) in venting systems is prohibited.
- 2) Covering non-metallic vent pipe and fittings with thermal insulation is prohibited.

If applicable, the venting system shall be installed in accordance with the venting system manufacturer's instructions.

When selecting vent material take into consideration that appliances installed near a corrosive or potentially corrosive air supply must be isolated from it or they will suffer damage to the appliance and the venting system.

The corrosion resistance of AL29-4C is typically higher than that of 316L. Always choose the venting system which best satisfies the requirements of the application.

This recommendation does not supersede local codes or the provision of the B149 in Canada or the National Fuel Gas Code in the United States

When selecting vent material take into consideration that appliances installed near a corrosive or potentially corrosive air supply must be isolated from it or they will suffer damage to the appliance and the venting system.

The corrosion resistance of AL29-4C is typically higher than that of 316L. Always choose the venting system which best satisfies the requirements of the application.

This recommendation does not supersede local codes or the provision of the B149 in Canada or the National Fuel Gas Code in the United States

Intake Air (Supply Air, or Fresh Air) Piping

- 1) **PVC** Non Foam Core Pipe.
- 2) **CPVC** (Chlorinated Polyvinyl Chloride).
- 3) **ABS** (Acrylonitrile-Butadiene-Styrene).
- 4) **Single wall**, galvanized, stainless steel

Single wall vent pipes are to be insulated 5 feet from wall toward the interior of the building to minimize external sweating.

9.3 OUTDOOR VENTING

When fitted with the factory supplied rain shield and UL approved vent cap, the MicoFlame series 2 is self-venting. The following applies to outdoor installations:

1. Use only factory supplied rain shields.
2. Periodically check to ensure that air intake and vent cap are not obstructed.
3. Locate boiler at least 3 feet away from any overhang.
4. Locate boiler at least ten feet from building air intake.
5. Avoid installation in areas where runoff from adjacent building can spill onto boiler.

9.4 SIDEWALL VENTING

When fitted with a vent terminal, the MicoFlame series 2 can vent up to 60 equivalent feet. Elbows can range from 8 to 15 feet in equivalent length depending on centreline radius. See Table 2 for vent sizes.

Boilers may be installed with either a horizontal sidewall vent or vertical roof top terminal. Terminals differ with each application. Horizontal lengths over 5 feet must be installed using corrosion resistant stainless steel. Use single wall vent and seal all joints or use pressure rated double wall vent.

Refer to local codes for proper installation and location of vent terminals.

When using sidewall vent, all vent connector seams and joints must be sealed with pressure sensitive aluminium tape or silicone sealant as specified by the vent manufacturer. Aluminium tape must meet the provisions of SMACNA AFTS-100-73 Standard.

When venting through unheated spaces with single wall vent, insulation should be wrapped around the vent pipe to prevent flue gas condensation inside the vent.

Periodically check to ensure that the vent terminal is unobstructed.

9.5 OUTDOOR AIR KIT

Provisions for combustion and ventilation air are to be in accordance with the section for “Air for Combustion and Ventilation”, of the National Fuel Gas Code, ANSI Z223.1/NFPA 54, or clause 8.2, 8.3, 8.4 of “Natural Gas and Propane Installation Code”, CAN/CSA B149.1.2, or applicable provisions of the local building codes.

If air is taken directly from outside the building with no duct, provide two permanent openings:

- a) Ventilation of the space occupied by fuel burning appliance(s) or equipment shall be supplied by a ventilation opening at the highest practicable point communicating with the outdoors. The total cross sectional area of the ventilation opening must be either 10% of the net free area required for combustion air or 10 sq. in (6500 mm²), whichever is greater.
- b) Net free area of combustion air opening shall be in accordance with all applicable codes. In the absence of such codes provide combustion air opening with a minimum free area of one square inch per 7,000 Btuh input (5.5 cm per kW) up to 1,000,000 Btuh and one square inch per 14,000 Btuh in excess of 1,000,000 Btuh. This opening must be ducted no higher than 18” nor less than 6” above the floor.
- c) In extremely cold climates when air supply is provided by natural air flow from the outdoors we recommend sizing the combustion air supply opening with a minimum free area of not less than one square inch per 30,000 Btu/hr, of the total rated input of the burner, provided that this does not conflict with local codes. This opening is in addition to the ventilation opening defined in paragraph a) above.

NOTE

Outside air openings shall directly communicate with the outdoors.

When fitted with the factory supplied air inlet ring and air intake terminal, the MicoFlame series 2 can draw outdoor air over an equivalent length of 60 feet. See Table 2 for vent sizes.

Boilers may be installed with either a horizontal sidewall vent or vertical roof top terminal. Terminals differ with each application.

The following applies to outdoor air installations:

1. Use only factory supplied air intake terminal.
2. Periodically check to ensure that air intake is not obstructed.
3. Refer to local codes for proper installation and location of vent terminals. Vertical vent terminal must be at least 3 feet above the highest point where it is located above the roof of a building and at least two feet higher than any part of the building within a horizontal distance of ten feet
4. Locate the air intake five feet away from the vent discharge. For sidewall venting locate the air intake below the vent outlet if possible.

Model	Air Intake Hood Part #	Description
800 – 1000	DOAI-08	8” Air Intake Hood
1200 – 1400	DOAI-10	10” Air Intake Hood
1600 - 2000	DOAI-12	12” Air Intake Hood

9.6 FILTER KIT

A louvered rear panel is the standard air inlet configuration for the MicoFlame Series 2. A filter kit is available. The filter is washable and accounts for an additional pressure loss of less than 0.05" W.C. Highly recommended for dusty environments.

The filter kit can also be provided when using the outdoor air kit.

9.7 STANDARD VENTING

The MicoFlame series 2 is a category 1 appliance and is approved for venting into a common standard chimney. If chimney height is much greater than 30 feet or if drafts are excessive, it may be preferable to provide a single acting barometric damper directly above the vent collar. This damper will ensure smooth light off and minimize standby loss through the boiler. Be sure to position the damper at least 6" away from the wall of the vent connector.

9.8 VENTING FOR CONDENSING APPLICATION

When supplied with the optional condensing cartridge, the MicoFlame series 2 is 95% efficient (category II or IV appliance) which requires the use of a special venting system fabricated from AL29-4C or equivalent material. Only venting components listed by a nationally recognized testing agency may be used.

This appliance may be installed with conventional, sidewall or vertical venting. Conventional vented appliances operate with negative pressure in the vent pipe and require a special vent adapter to increase the flue outlet diameter. Sidewall and vertically vented appliances operate with positive pressure in the vent pipe and may be directly connected to the flue outlet without the use of an increaser.


The vent pipe must terminate in an elbow pointed down must be located at least 10" away from the wall. Camus also offers the option of a stainless-steel vent termination hood in lieu of using a 90° elbow.

Consult the vent pipe manufacturer's instructions for minimum clearances to combustibile material for vent components. In the absence of instructions, the minimum clearance to combustibile material is six inches.

Consult vent pipe manufacturer's instructions for proper method of sealing vent pipe sections and fittings. In the absence of instructions, make sure that pipe and fittings are clean by swabbing with alcohol. Use Dow Corning 736 or 732 RTV, Polybar # 500 RTV or Sil-bond 4500 or 6500 to seal vent pipe. Do not use other sealants or adhesives except as expressly permitted by vent manufacturer's instructions.

Consult vent pipe manufacturer's instructions for vent system assembly. Follow vent pipe manufacturer's instructions if those instructions differ from this section.

Model	Air Intake Hood Part #	Description
800 – 1000	STJH-08-CH	8" Vent Termination Hood
1200 – 1400	STJH-10-CH	10" Vent Termination Hood
1600 – 2000	STJH-12-CH	12" Vent Termination Hood

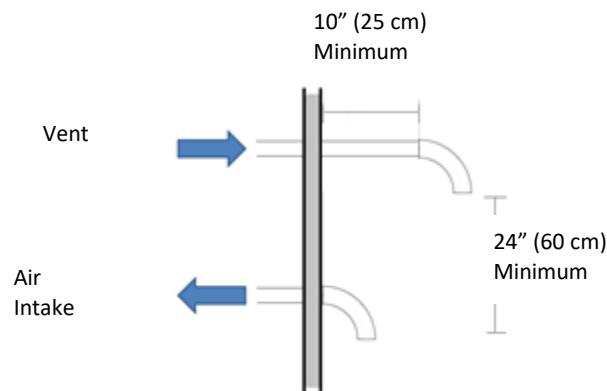

9.9 COMMON VENTING

Multiple appliances may be vented into a common chimney. The chimney must be lined with AL29-4C and a single acting barometric damper must be provided for each appliance. Vent diameters are to be increased by one size over the recommended size.

A qualified professional using a proven vent-sizing program with input of accurate operating parameters must properly calculate sizing of the venting system. In applications where flue gas temperatures are lower than can support a Category II with conventional negative draft, it will be determined at the venting design stage that a positive pressure will be developed in the vent. It will then be necessary to either provide separate vents as for Category IV, or to provide an extractor at the chimney outlet in order to maintain a negative draft in the chimney and allow common venting.

Approval of the installation will be at the discretion of authorities having jurisdiction.


The chimney must be protected from down drafts, rain, and debris by using a listed chimney cap.

Sidewall and Vertical Venting

The maximum vent length is 60 equivalent feet. Vent pipe may be run through a vertical or horizontal chase provided that minimum clearances to combustible materials are maintained.

- The vent terminal shall terminate at least 3 feet (1m) above any forced air inlet within 10 feet (3m) horizontally.
- The vent terminal MUST NOT terminate below a forced air intake at any distance.
- Do not terminate the vent in a window well, stairwell, alcove, courtyard, or other recessed area. The vent cannot terminate below grade.
- Do not terminate the vent near soffit vents or crawl space vents or other areas where condensate or vapour could create a nuisance or hazard of cause property damage.
- Do not terminate the vent where condensate or vapour could cause damage or could be detrimental to the operation of regulators, relief valves or other equipment.
- The vent shall not terminate less than 7 feet above a public walkway due to the normal formation of water vapor in the combustion process.
- The vent system shall terminate at least 3 feet (1m) above normal snow levels and least 7 feet (2.15m) above grade when located adjacent to public walkways.
- The vent terminal shall not be installed closer than 3 feet (1m) from an inside corner of an L-shaped structure.
- The vent terminal should have a minimum clearance of 4 feet (1.25m) horizontally from and in no case above or below, unless a 4 foot (1.25m) horizontal distance is maintained from electric meters, gas meters, regulators and relief equipment. In all cases, local codes take precedence.
- Flue gas condensate can freeze on exterior walls or on the vent terminal. Frozen condensate on the vent cap can result in a blocked flue condition. Some discoloration to exterior building surfaces can be expected. Adjacent brick or masonry surfaces should be protected with a rust resistant sheet metal plate.
- The vent shall not be connected to a chimney flue serving separate appliances, designed to burn solid fuel.

9.10 SIDEWALL CLEARANCE SPECIFICATIONS

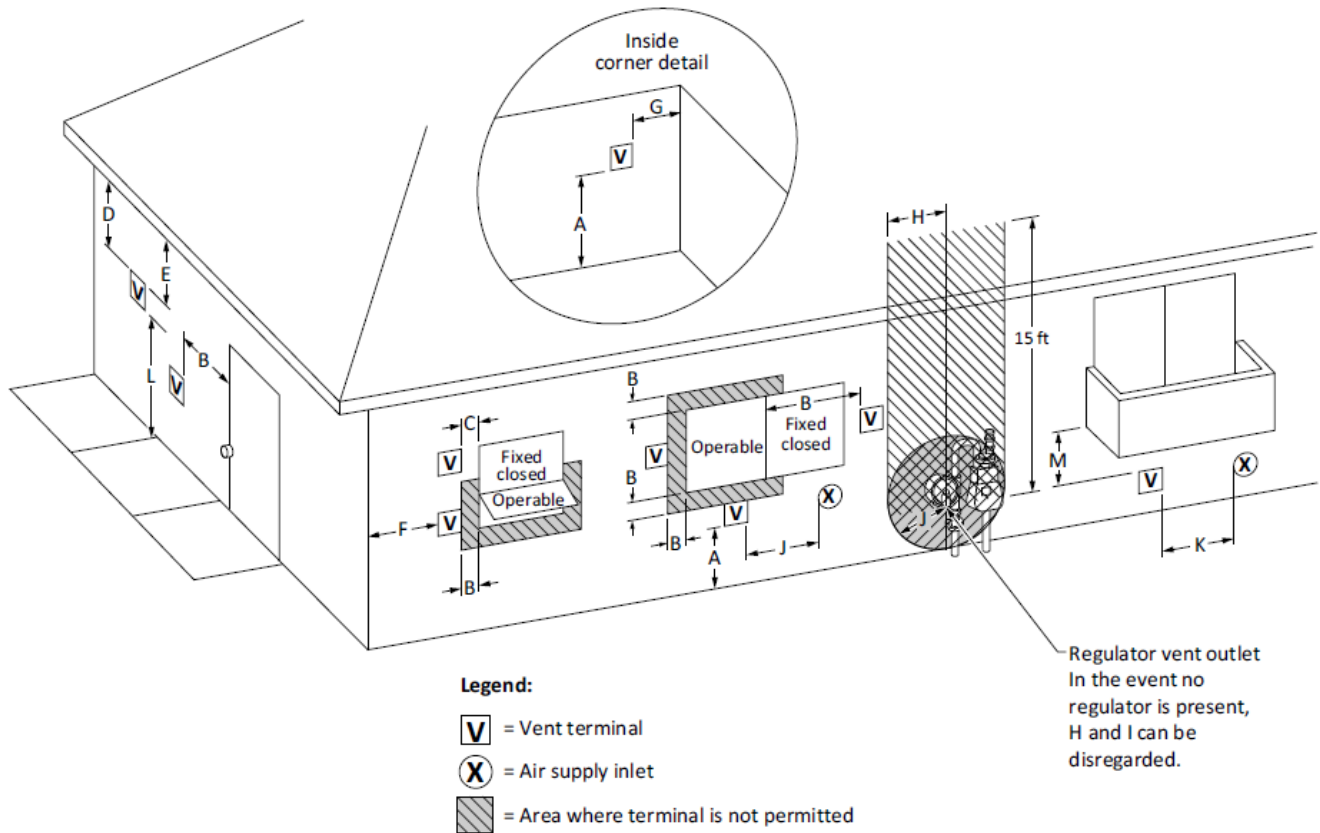

Direct Vent Terminal Clearances		Canadian Installations ¹	US Installations ²
A	Clearance above grade, veranda, porch, deck, or balcony	12" (30 cm)	12" (30 cm)
B	Clearance to window or door that may be opened	36" (91cm) for appliances >100,000 Btuh (30kW)	12" (30cm) for appliances >50,000 Btuh (15kW)
C	Clearance to permanently closed window	-	-
D	Vertical clearance to ventilated soffit located above the terminal within a horizontal distance of 2 ft (61cm) from the center line of the terminal.	-	-
E	Clearance to unventilated soffit	-	-
F	Clearance to outside corner	-	-
G	Clearance to inside corner	-	-
H	Clearance to each side of center line extended above meter/regulator assembly	3 ft (91 cm) within a height of 15 ft (4.6 m) above the meter/ regulator assembly	-
I	Clearance to service regulator vent outlet	3 ft (91 cm)	-
J	Clearance to non-mechanical air supply inlet to building or the combustion air inlet to any other appliance	12" (30 cm) for appliances >10,000 Btuh (3kW) 36" (91cm) for appliances >100,000 Btuh (30kW)	12" (30cm) for appliances >50,000 Btuh (15kW)
K	Clearance to a mechanical air supply inlet	6 ft (1.83 m)	3 ft (91 cm) above if within 10 ft (3 m) horizontally 7 ft (2.13 m) for mechanical draft systems (Category I appliances). Vents for Category II and IV appliances cannot be located above public
L	Clearance above paved sidewalk or paved driveway located on public property	7 ft (2.13 m) ^a	

			walkways or other areas where condensate or vapor can cause a nuisance or hazard.
M	Clearance under veranda, porch deck, or balcony	12" (30 cm) ^β	-

¹ In accordance with the current CSA B149.1 Natural Gas and Propane Installation Code

² In accordance with ANSI Z223.1/ NFPA 54 National Fuel Gas Code

^α A vent shall not terminate directly above a sidewalk or paved driveway that is located between two single family dwellings and serves both dwellings

^β Permitted only if veranda, porch, deck, or balcony is fully open on a minimum of two sides beneath the floor.

- For clearances not specified in ANSI Z223.1/ NFPA 54 or CSA-B149.1. Clearance in accordance with local installation codes and the requirements of the gas supplier

Other than Direct Vent Terminal Clearances		Canadian Installations ¹	US Installations ²
A	Clearance above grade, veranda, porch, deck, or balcony	12" (30 cm)	12" (30 cm)
B	Clearance to window or door that may be opened	12" (30cm) for appliances >10,000 Btuh (3kW) and ≤ 100,000 Btuh (30kW) 36" (91cm) for appliances >100,000 Btuh (30kW)	4 ft. (1.2 m) below or to side of opening; 1 ft (300 mm) above opening
C	Clearance to permanently closed window	-	-
D	Vertical clearance to ventilated soffit located above the terminal within a horizontal distance of 2 ft (61cm) from the center line of the terminal.	-	-
E	Clearance to unventilated soffit	-	-
F	Clearance to outside corner	-	-
G	Clearance to inside corner	-	-
H	Clearance to each side of center line extended above meter/regulator assembly	3 ft (91 cm) within a height of 15 ft (4.6 m) above the meter/ regulator assembly	-
I	Clearance to service regulator vent outlet	3 ft (91 cm)	-
J	Clearance to non-mechanical air supply inlet to building or the combustion air inlet to any other appliance	36" (91cm) for appliances >100,000 Btuh (30kW)	4 ft (1.2m) below or to side of opening; 1 ft (300 mm)
K	Clearance to a mechanical air supply inlet	6 ft (1.83 m)	3 ft (91 cm) above if within 10 ft (3 m) horizontally
L	Clearance above paved sidewalk or paved driveway located on public property	7 ft (2.13 m) ^α	7 ft (2.13 m) for mechanical draft systems (Category I appliances). Vents for Category II and IV appliances cannot be located above public walkways or other areas where condensate or vapor can cause a nuisance or hazard.
M	Clearance under veranda, porch deck, or balcony	12" (30 cm) ^β	-

¹ In accordance with the current CSA B149.1 Natural Gas and Propane Installation Code

² In accordance with ANSI Z223.1/ NFPA 54 National Fuel Gas Code

^α A vent shall not terminate directly above a sidewalk or paved driveway that is located between two single family dwellings and serves both dwellings

^β Permitted only if veranda, porch, deck, or balcony is fully open on a minimum of two sides beneath the floor.

* For clearances not specified in ANSI Z223.1/ NFPA 54 or CSA-B149.1. Clearance in accordance with local installation codes and the requirements of the gas supplier

10. ACCESSORIES

WATER FLOW SWITCH (shipped loose)


A water flow switch is shipped loose and is to be installed in the outlet piping on all heating boilers and hot water supply boilers.

The flow switch is wired in series with the 24VAC safety control circuit. A diagnostic light will be indicated on the control display on a low flow condition.


LOW WATER CUTOFF (If Equipped)

If this boiler is installed above radiation level, a low water cut-off device must be installed at the time of boiler installation. Some local codes require the installation of a low water cut-off on all systems. Electronic low water cut-offs are available as a factory supplied option on all models. Low water cut-offs should be tested every six months. The normally open switch contact of the low water cutoff is to be wired in series with the flow switch. A diagnostic light will be indicated on the control display on a low flow condition. Caution: remove jumper when connecting to 24 VAC circuit.

Low Water Cutoff Electrical Connections (Watts)

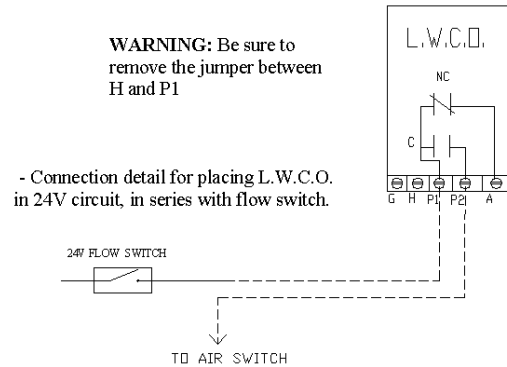

Low Water Cutoff Electrical Connections (ITT)

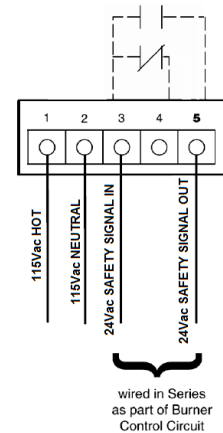

RELIEF VALVE (shipped loose) - This appliance is supplied with a relief valve sized in accordance with ASME Boiler and Pressure Vessel Code, Section IV (“Heating Boilers”). The relief valve is to be installed in the vertical position and mounted in the hot water outlet. No valve is to be placed between the relief valve, and the appliance. To prevent water damage, the discharge from the relief valve shall be piped to a suitable floor drain for disposal when relief occurs. No reducing couplings or other restrictions shall be installed in the discharge line. The discharge line shall allow complete drainage of the valve and line. Relief valves should be manually operated at least once a year.

CONDENSING HEAT RECOVERY MODULE PIPING CONFIGURATIONS - Caution: If isolation valves are provided on the CHRМ, the provision of a relief valve at the outlet of the secondary is recommended. This valve is to be sized at minimum for 10% of the input of the appliance and is to be piped to drain in a manner similar to the appliance relief valve.

CHRМ IN SERIES WITH PRIMARY HEAT EXCHANGER (INTEGRATED LOOP) - The supply water (Cold water) is pre-heated by CHRМ and fed into the outlet of the primary Heat Exchanger. Provisions must be made to prevent cold water below 115°F (46°C) entering the Primary Heat Exchanger.

BOILER APPLICATION (HYDRONIC HEATING) - In case of boiler (Hydronic heating boiler) application, the return water (supply water) may be more than 115°F (46°C), therefore there is no need for a recirculation loop and the primary heat exchanger and CHRМ can be piped in parallel. Since the inlet water temperature to CHRМ exceeds 115°F (46°C) it will not condense fully and therefore the CHRМ will not perform to its maximum efficiency capacity. If water colder than 115°F (46°C) is available, it can be fed to the CHRМ.

WATER HEATER APPLICATION (HOT WATER SUPPLY) - In case of domestic water supply (Water Heating), the fresh inlet water temperature will be less than 115°F (46°C), in this case the CHRМ may be fed directly with part of the supply water using a secondary pump.

A pressure relief valve is supplied as standard equipment. The relief valve protects against damage that could be caused by malfunctioning controls or excessive water pressure. If a relief valve is not used, warranty is void.

The relief valve is to be located as near as practical to the outlet of the boiler. To maintain capacity do not reduce the inlet connection of the relief valve. Connect the outlet of the relief valve to a suitable drain. The drainpipe must point down from the valve and must not be smaller than the outlet of the valve. The end of the drain line should not be concealed or threaded and should be protected against freezing. No valve of any kind should be installed between the relief valve and the unit or in the drain line. Extensive runs, traps or bends could reduce the capacity of the valve. This valve should be checked for proper operation at least once a year by a qualified service technician.

SELECTING A PUMP - For hydronic heating and DHW applications with normal water hardness choose a pump which will result in temperature rise across the main heat exchanger of 10°F to 25 °F (5.5°C-13.8°C) depending on the size of the heater. If necessary, use a flow setter valve to achieve the desired temperature rise.

For DHW applications with other than normal water hardness choose a pump for the local water hardness conditions. Alternatively run the pump continuously and soften the water to normal levels. Damage to the heat exchanger as a result of scaling or corrosive water conditions is non-warrantable.

11. FREEZE PROTECTION


- Appliance installations are not recommended outdoors in areas where danger of freezing exists unless precautions are taken. Maintaining a mixture of 50% water and 50% propylene glycol is the preferred method of freeze protection in hydronic systems. This mixture will protect the appliance to approximately -35°F (-37°C). To maintain the same temperature rise across the appliance increase the GPM flow by 15% and the head loss by 20%.

The following example demonstrates the procedure to follow for calculating the revised head for the heat exchanger when using a water / glycol mixture.

- Given that Camus is showing a heat exchanger flow and head loss of 100 gpm @ 10 feet
- Increasing the flow by 15% now results in a head loss of 13 feet at 115 gpm (from B&G system syzer). At this increased flow Camus now recommends to increase the head loss by 20%.
- The requirement for the heat exchanger with water / glycol mixture will now be 115 gpm @ 15.6 feet. (ie. $1.2 \times 13\text{ft.} = 15.6\text{ft.}$)
- A similar procedure must be followed to calculate the additional head loss in pipe and fittings in order to arrive at the proper pump selection.
- For Outdoor installations regular inspections should be made to ensure that air intake and vent are clear. Always consider the use of a shelter such as a garden shed in lieu of direct exposure of the appliance to the elements. The additional protection afforded by the shelter will help to minimize nuisance problems with electrical connections and will allow easier servicing of the appliance under severe weather conditions.

12. WARNING REGARDING CHILLED WATER SYSTEMS

When a boiler is connected to an air conditioning system where the same water is used for heating and cooling, the chiller must be piped in parallel with the boiler. Appropriate flow control valves; manual or motorized must be provided to prevent the chilled water from entering the boiler. (See Figure 3)

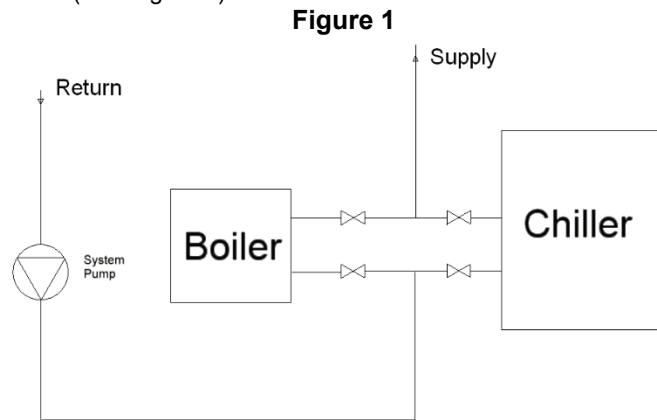

When a boiler is connected to heating coils located in air handling units (where they may be exposed to refrigerated air circulation), the boiler piping system shall be equipped with a flow control valve or other automatic means to prevent gravity circulation of chilled water through the boiler. Chilled water in the boiler will create condensate on the boiler tubes, which will collect in the combustion chamber causing corrosion.

13. PIPING OF BOILER TO SYSTEM

Check all applicable local heating, plumbing, and building safety codes before proceeding. Be sure to provide unions and gate valves at inlet and outlet to boiler so that it can be easily isolated for service. This boiler is of a low mass design, which provides for instant heat transfer. Special attention to water flow rates will ensure that temperature rise does not exceed 35°F (19.4°C). The following Table is provided as a guide. For application in areas known to have hard water conditions, contact factory for recommendations.

Table 2: Flow and Pressure Drop at a Given Temperature Rise

<i>Head Loss and Flow Vs Temperature Rise</i>						
Model	20 °F		30 °F		35 °F	
	USGPM	ΔP ft.	USGPM	ΔP ft.	USGPM	ΔP ft.
800	66.6	2.8	44.4	1.1	38.0	0.8
1000	83.3	4.9	55.5	2.0	47.6	1.5
1200	100.0	6.9	66.7	3.1	57.1	2.4
1400	*	*	77.8	4.3	66.7	3.4
1600	*	*	88.9	5.4	76.2	4.0
1800	*	*	100.0	6.9	85.7	5.1
2000	*	*	*	*	95.2	6.2

*Contact factory for recommendations

Figure 2: Typical Boiler Piping System

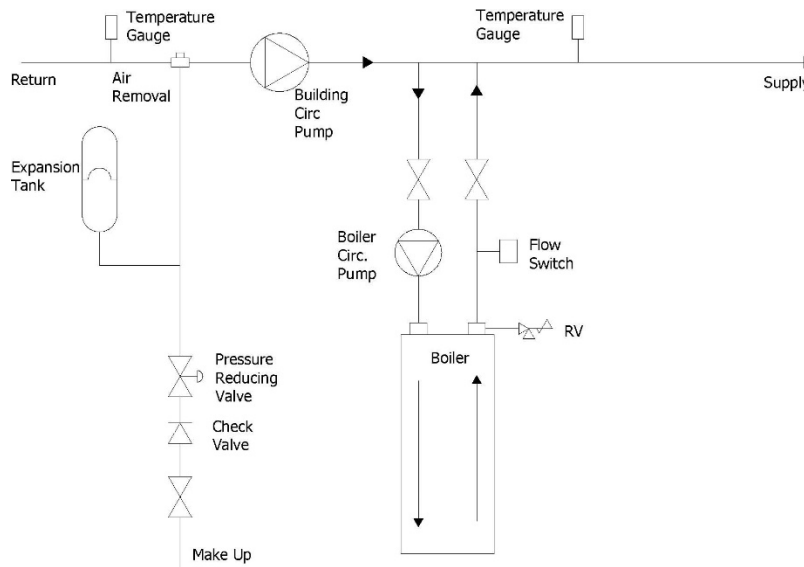


Figure 5: Typical Water Heating System


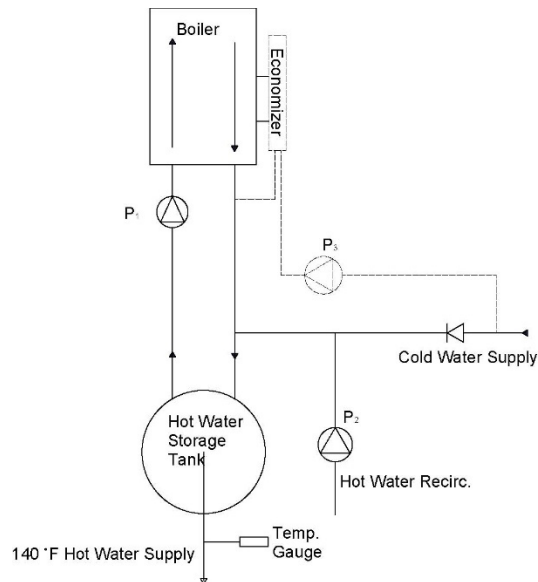


Figure 6: Typical Water Heating System

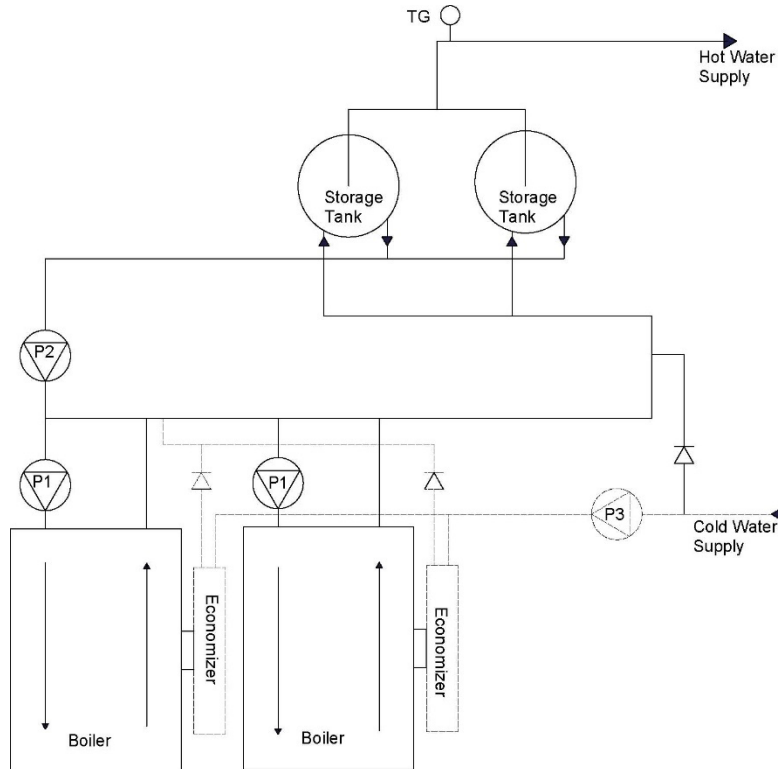

If the boiler is installed above radiation level, it must be provided with a low water cutoff device at the time of boiler installation. (Available from factory)

To eliminate trapped air, install venting devices at high points in the system as well as in the piping on the suction of the pump and in the piping on the discharge of the boiler.

Suitable pipe hangers must support the weight of all water and gas piping or floor stands.

Do not allow the boiler to run with inlet water temperature below 115°F (46°C).

The boiler must be installed so that the gas ignition system components are protected from water (dripping, spraying, rain, etc.) During appliance operation and service (circulator replacement, control replacement, etc.)

14. PLACING BOILER IN OPERATION

The MicoFlame Series 2 boiler should be installed and started up by qualified personnel.

With the boiler off, open makeup water valve and allow system to fill slowly. Adjust the pressure regulator to provide at least 15 PSIG in the system when cold.

With all air vents open, run system circulating pump for a minimum of 30 minutes with the boiler off.

Open all strainers in the circulating system and check for debris.

Check liquid level in expansion tank. With system full of water at 15 PSIG, the level of water in the expansion tank should not exceed ¼ of the total volume with the balance filled with air.

Start up boiler following instructions provided. Operate entire system including pumps and radiation for at least 1 hour.

Check water level in expansion tank. If level exceeds ½ of tank volume, air is still trapped in system. Shut down boiler and continue to run pumps.

Within 3 days of start up, recheck all air vents and expansion tank as described above.

15. INSTRUMENTATION AND CONTROLS

The appliance is equipped with safety controls as well as operational controls.

High Temperature Limit

The high temperature limit is located behind the appliance's access doors. A remote capillary bulb runs to a thermo-well on the outlet side of the inlet/outlet header. The appliance high limit is set at the factory to 210°F for hot water and 230°F for heating.


Air Flow Switch

A differential air pressure switch is provided to prove the operation of the fan and adequate air flow to the burner. The pressure switch sensing point is at the inlet to the mixing tube where the air and gas mixes. The LED indicator for air flow will not illuminate should the pressure switch detect a sustained low air condition. The appliance is provided with one air switch per burner module.

16. MICOFLAME SERIES 2 CONTROL PANEL

The appliance is provided with a control panel at the front. Operating controls are installed inside the control box and are accessible by undoing the thumb screw and opening the door. The diagnostic information centre as well as the on/off switch, 24V fuse, and the appliance temperature controls reside on the control box door.

Figure 7 – Display, Appliance Temperature Controller, and Indicating LED

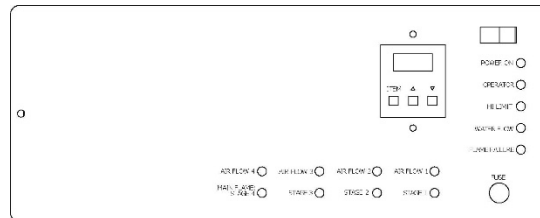


The Boiler Temperature Controller (BTC) for this appliance is a Camus 780014 SmartFlame control. This controller accommodates up to four-stage control with six modes of operation which provides setpoint as well as rest control. It provides the following:

1. Readings of inlet and outlet water temperatures as well as ΔT temperature rise.
2. Six pre-set modes of operation; mode 1, 2, 4, and 5 for heating, mode 3 for DHW and mode 6 for operation by a remote controller.
3. Operation as an auto reset limit.
4. Operation as a control for inlet water temperature.
5. Optional tank mounted sensor used in conjunction with inlet sensor.
6. Adjustable pump delay feature based on ΔT temperature difference between inlet and outlet temperatures. Accepts 1/6 hp. pump directly across terminals 13 & 14.
7. Adjustable; target temp, inter-stage differential, on delay between stages, minimum on time per stage, minimum off time per stage.
8. Display of run hours for maintenance purposes. Counter wraps around at 1000 hours.
9. Flame failure signal 24 V.
10. Molex connector for ease of service.
11. Error message display.
12. Test override feature to test pump operation, stages 1, 2, 3, 4, and 5 and alarm.
13. Pump exercising feature runs pump 10 seconds every three days of no pump operation.

Setting the Appliance Temperature Control

Press and hold the ITEM, UP and DOWN buttons simultaneously for 1 second. The appliance will shut down and pressing the ITEM key and then selecting the desired setting using the UP, DOWN buttons, can now make the settings. Pressing the ITEM key again will cause the last setting to be accepted. After settings have been made wait 30 seconds for the control to return to normal operating mode. In normal operating mode the inlet temperature, outlet temperature, ΔT temperature and ON hours can be viewed by repeatedly pressing the ITEM key only. If you wish to check the setting you will have to start again by pressing and holding the ITEM, UP and DOWN buttons simultaneously for 1 second, and then use only the ITEM key to scroll through the settings. After checking the settings allow the control to return to normal operation on its own.

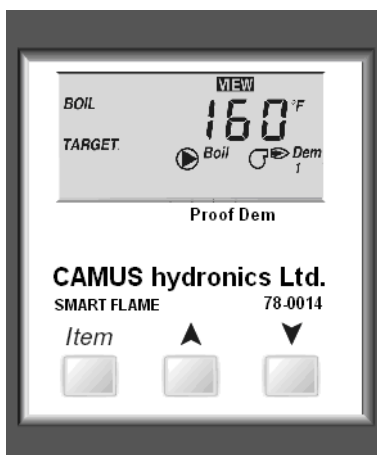

KEY	KEY DESCRIPTION
Item	The abbreviated name of the selected item will be displayed in the item field of the display. To view the next item, press the Item button.
▲	Increase a parameter value.
▼	Decrease a parameter value.

Levels of Access

View – Access to general boiler and display settings and will allow adjustments to the central heating and domestic hot water setpoint.


Adjust – Access to all user parameters and allows for changes to additional boiler parameters to allow for ease of startup and serviceability.

General Symbol Description


SYMBOL	SYMBOL NAME	SYMBOL DESCRIPTION
Boil	Boiler Pump	Shown when boiler pump is in operation
DHW	DHW Pump	Shown when DHW pump is in operation
Dem 1	Heat Demand	Shown when heat demand is present
Dem 2	Flame Proof	Shown when flame signal is proven
Burner	Burner	Shown when burner is on
Warning	Warning	Shown when an error is present
Pointers	Pointers	Shows the operation as indicated by the text (Proof Dem)
WWSD	WWSD	Displays when the control is in Warm Weather Shutdown

16.1 MODE 1 & 2: SETPOINT OPERATION: VIEW DISPLAY

Mode 1 intended for hydronic heating. The set-point for inlet water control is pre-set to 180°F and the auto re-set limit is set to 230°F. The inlet set-point can be adjusted, however the limit is fixed. In addition to the auto reset limit the factory installs a manual re-set limit set to 250°F. The control turns on the appliance pump and stages the appliance to maintain set-point target temperature at the **appliance inlet** temperature whenever an external heat demand is present. Once the external heat demand is removed, the control turns off the appliance and operates the appliance pump based on the purge feature.

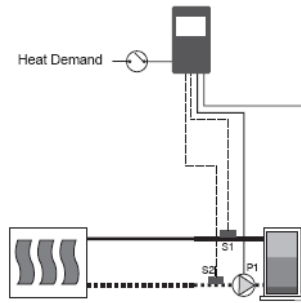

Mode 2 is intended for hydronic heating. The set-point for inlet water control is pre-set to 180°F and the auto re-set limit is set to 230°F. The inlet set-point can be adjusted, however the limit is fixed. In addition to the auto reset limit the factory installs a manual re-set limit set to 250°F. The control turns on the appliance pump and stages the appliance to maintain set-point target temperature at the appliance inlet temperature whenever an external heat demand is present. Once the external heat demand is removed, the control turns off the appliance and operates the appliance pump based on the purge feature. The control turns on the appliance pump and stages the appliance to the set-point target temperature at the **system** temperature whenever an external heat demand is present. Once the last appliance stage turns off and the heat demand is still present, the control then operates the appliance pump based on the purge feature. In this case, it is imperative that the system pump operates continuously in order to provide constant circulation past the system sensor. The appliance pump then turns back on with the pump P1 based on the purge feature.

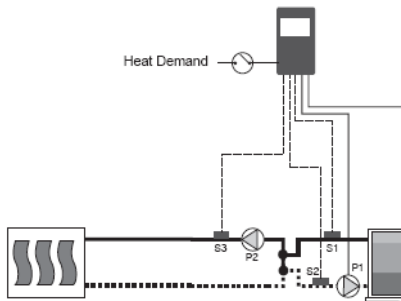

From the Home display;


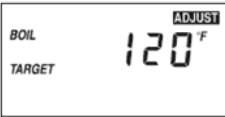
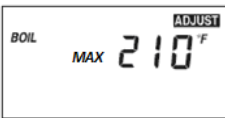
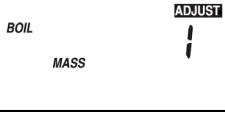

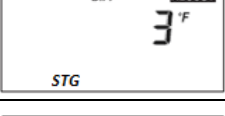

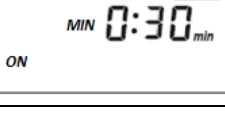
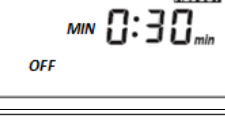


- 1) Press **[ITEM]** to view the following parameters:

Display	Parameter Name	Parameter Description	Parameter Range
	Boiler System Temperature (Mode 2 ONLY)	Real-time System Temperature to Boiler	14 to 266°F (-10 to 130°C)
	Boiler Outlet Temperature	Real-time Outlet Temperature to Boiler	14 to 266°F (-10 to 130°C)
	Boiler Inlet Temperature	Real-time Inlet Temperature to Boiler	14 to 266°F (-10 to 130°C)
	Boiler Delta T	Real-time temperature difference between the outlet sensor and the inlet sensor.	-99 to 252°F (-72 to 140°C)
	Total Run Time Since Installation	Monitors the amount of operational time since the Unit was installed. The first two digits are the number of thousands of hours and the three-digit display shows the number of hundreds of hours. Press (▲, ▼) simultaneously to reset the counter	Alternates between 00 and 999

16.2 MODE 1 & 2: SETPOINT OPERATION: ADJUST DISPLAY

From the Home display;


- 1) Press (Item, ▲, ▼) simultaneously to view the following parameters:

Display	Parameter Name	Parameter Description	Parameter Range
	Mode	Operating mode for the boiler. NOTE: A complete description of each mode can be found in section 8.4 Modes of Operation in this manual.	1 to 6 Default = 1
	Boiler Target Temperature	To provide a target setpoint for the heating system. Setpoint is controlled to the inlet sensor	70 to 220°F (21 to 104°C) Default = 120°F (49°C)
	Boil Max	Maximum boiler target temperature	120 to 225°F (48 to 107°C) Default = 210°F (99°C)
	Boil Mass (Mode 2 ONLY)	Thermal mass of boiler. This determines interstage delay and minimum on and minimum off times.	1 to 3 Default = 1
	Differential Temperature	To provide a modulation rate above and below the Boiler Target temperature. For example, if the value is 10°F and the Boiler Target is 160°F the boiler will begin to modulate at 150°F and shut off at 170°F.	Au, 2 to 42°F (Au, -17 to 6°C) Default = 10°F
	Stage Differential	Dictates the staging of the boiler and each stage is iterative. For example, if the value is 3°F. Stage 1 will be active 3°F below setpoint, Stage 1 & 2 will be active 6°F below setpoint.	Au, 2 to 42°F (Au, -17 to 6°C) Default = 10°F
	On Delay	Interstage delay to activate the next stage	0:10 to 8:00 minutes Default = 1:00 minute
	Minimum On Time	Minimum on time for each stage	0:10 to 5:00 minutes Default = 0:30 minute
	Minimum Off Time	Minimum off time for each stage	0:10 to 5:00 minutes Default = 0:50 minutes
	Pump Delay	Boiler post pump time after burner has shut off, in seconds.	OFF, 0:20 to 9:55 min, On Default = 1:00 min
	Temperature Units	Select the desired unit of measurement	°F, °C Default = °F

16.3 MODE 3: SETPOINT OPERATION: VIEW DISPLAY

Mode 3 is intended for domestic water heating. The set-point for inlet water control is pre- set to 140°F and the auto re-set limit

is set to 200°F. The inlet set-point can be adjusted, however the limit is fixed. In addition to the auto reset limit the factory installs a manual re-set limit set to 210°F. The control turns on the appliance pump and stages the appliance to maintain set-point target temperature at the **appliance** inlet temperature. An internal demand is generated from the DHW sensor which could be placed in the storage tank while the external heat demand is permanently wired or through a timer. Once the DHW tank is satisfied (internal demand is removed), the control turns off the appliance and operates the appliance pump based on the purge feature.

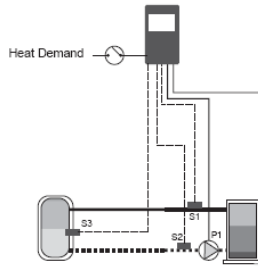

From the Home display;

- 1) Press [ITEM] to view the following parameters:







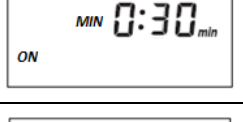
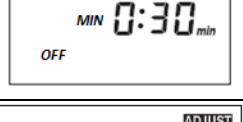


Display	Parameter Name	Parameter Description	Parameter Range
	Boiler Outlet Temperature	Real-time Outlet Temperature to Boiler	14 to 266°F (-10 to 130°C)
	Boiler Inlet Temperature	Real-time Inlet Temperature to Boiler	14 to 266°F (-10 to 130°C)
	Boiler Delta T	Real-time temperature difference between the outlet sensor and the inlet sensor.	-99 to 252°F (-72 to 140°C)
	Tank Temperature	Real-time Tank Temperature to Boiler	14 to 266°F (-10 to 130°C)
	Total Run Time Since Installation	Monitors the amount of operational time since the unit was installed. The first two digits are the number of thousands of hours and the three-digit display shows the number of hundreds of hours. Press (▲, ▼) simultaneously to reset the counter	Alternates between 00 and 999

16.4 MODE 3: SETPOINT OPERATION: ADJUST DISPLAY

From the Home display;

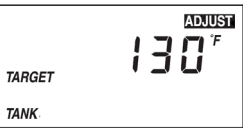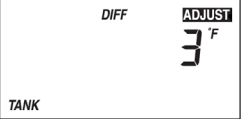
- 1) Press (Item, ▲, ▼) simultaneously to view the following parameters:

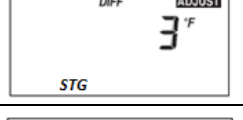Display	Parameter Name	Parameter Description	Parameter Range
	Mode	Operating mode for the boiler. NOTE: A complete description of each mode can be found in section 8.4 Modes of Operation in this manual.	1 to 6 Default = 1
	Boiler Target Temperature	To provide a target setpoint for the heating system. Setpoint is controlled to the inlet sensor	OFF, 70 to 220°F (OFF, 21 to 104°C) Default = 140°F (82°C)


	Tank Target Temperature	To provide a target setpoint for the Tank. Setpoint is controlled to the Tank sensor	OFF, 70 to 190°F (OFF, 21 to 88°C) Default = 130°F (54°C)
	Tank Differential	To provide a modulation rate above and below the Tank Target Temperature. For example, if the value is 10°F and the Tank Target Temperature is 160°F the boiler will begin to modulate at 150°F and shut off at 170°F.	2 to 10°F (1 to 5°C) Default = 3°F (1°C)
	Boil Max	Maximum boiler target temperature	120 to 225°F (48 to 107°C) Default = 210°F (99°C)
	Differential Temperature	To provide a modulation rate above and below the Boiler Target temperature. For example, if the value is 10°F and the Boiler Target is 160°F the boiler will begin to modulate at 150°F and shut off at 170°F.	Au, 2 to 42°F (Au, -17 to 5°C) Default = 10°F
	Stage Differential	Dictates the staging of the boiler and each stage is iterative. For example, if the value is 3°F. Stage 1 will be active 3°F below setpoint, Stage 1 & 2 will be active 6°F below setpoint.	Au, 2 to 42°F (Au, -17 to 6°C) Default = 10°F
	On Delay	Interstage delay to activate the next stage	0:10 to 8:00 minutes Default = 1:00 minute
	Minimum On Time	Minimum on time for each stage	0:10 to 5:00 minutes Default = 0:30 minute
	Minimum Off Time	Minimum off time for each stage	0:10 to 5:00 minutes Default = 0:50 minutes
	Pump Delay	Boiler post pump time after burner has shut off, in seconds.	OFF, 0:20 to 9:55 min, On Default = 1:00 min
	Temperature Units	Select the desired unit of measurement	°F, °C Default = °F

16.5 MODE 4 & 5: OUTDOOR RESET OPERATION: VIEW DISPLAY

Mode 4 is intended for hydronic heating. The set-point for inlet water control is pre-set to 180°F and the auto re-set limit is set to 230°F. The inlet set-point can be adjusted, however the limit is fixed. In addition to the auto reset limit the factory installs a manual re-set limit set to 250°F. The control turns on the appliance pump and stages the appliance to maintain outdoor reset target temperature at the **appliance** inlet temperature whenever an external heat demand is present. Once the external heat demand is removed, the control turns off the appliance and operates the appliance pump based on the purge feature.

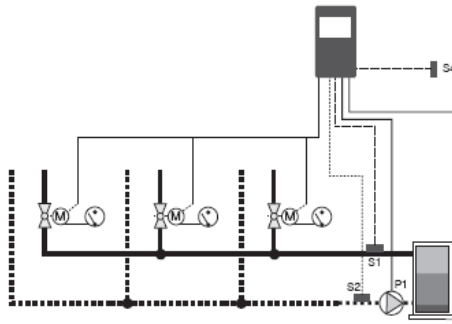

Mode 5 is intended for hydronic heating. The set-point for inlet water control is pre-set to 180°F and the auto re-set limit is set to 230°F. The inlet set-point can be adjusted, however the limit is fixed. In addition to the auto reset limit the factory installs a manual re-set limit set to 250°F. The control turns on the appliance pump and stages the appliance to maintain outdoor reset target temperature at the **system** temperature whenever an external heat demand is present. Once the last appliance stage turns off and the heat demand is still present, the control then operates the appliance pump based on the purge feature. In this case, it is imperative that the system pump operates continuously in order to provide constant circulation past the system sensor. The appliance pump then turns back on with the first stage of the appliance. If the heat demand is removed, the appliance is turned off and the control operates the appliance

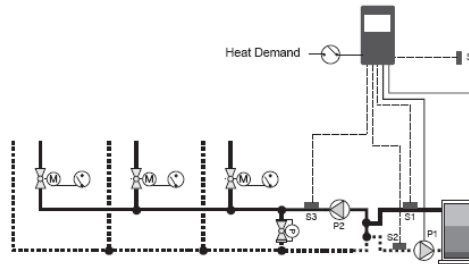

From the Home display;


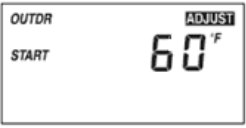
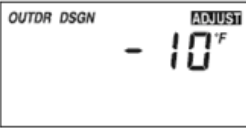
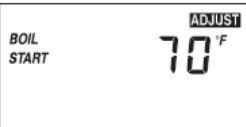

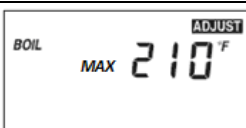
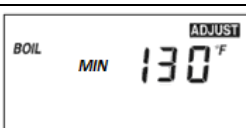
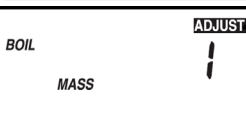

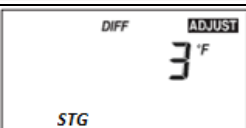

- 1) Press **[ITEM]** to view the following parameters:




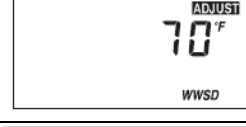

Display	Parameter Name	Parameter Description	Parameter Range
OUTDR VIEW 32 °F	Outdoor Temperature	Real-time Outdoor Temperature	-60 to 190°F (-51 to 88°C)
BOILSUP VIEW 170 °F	Boiler System Temperature (Mode 5 ONLY)	Real-time System Temperature to Boiler	14 to 266°F (-10 to 130°C)
BOIL OUT VIEW 170 °F	Boiler Outlet Temperature	Real-time Outlet Temperature to Boiler	14 to 266°F (-10 to 130°C)
BOIL IN VIEW 145 °F	Boiler Inlet Temperature	Real-time Inlet Temperature to Boiler	14 to 266°F (-10 to 130°C)
BOIL ΔT VIEW 25 °F	Boiler Delta T	Real-time temperature difference between the outlet sensor and the inlet sensor.	-99 to 252°F (-72 to 140°C)
BOIL ON VIEW 000	Total Run Time Since Installation	Monitors the amount of operational time since the unit was installed. The first two digits are the number of thousands of hours and the three-digit display shows the number of hundreds of hours. Press (▲, ▼) simultaneously to reset the counter	Alternates between 00 and 999

16.6 MODE 4 & 5: OUTDOOR RESET OPERATION: ADJUST DISPLAY

From the Home display;

- 1) Press (Item, ▲, ▼) simultaneously to view the following parameters:

Display	Parameter Name	Parameter Description	Parameter Range
	Mode	Operating mode for the boiler. NOTE: A complete description of each mode can be found in section 8.4 Modes of Operation in this manual.	1 to 6 Default = 1
	Outdoor Start Temperature	Outdoor starting temperature used in the reset ratio for the heating system. Typically set to the desired building temperature.	35 to 85°F (2 to 29°C) Default = 60°F (21°C)
	Outdoor Design Temperature	Outdoor design temperature used in the reset ratio for the heating system. Set to the coldest annual outdoor temperature in the local area.	-60 to 50°F (-51 to 10°C) Default = -10°F (-23°C)
	Boiler Start Temperature	Starting water temperature used in the reset ratio calculation for the heating system. Typically set to the desired building temperature.	35 to 150°F (2 to 66°C) Default = 70°F (21°C)
	Boiler Design Temperature	Boiler design water temperature used in the reset ratio calculation for the heating system. Set to the boiler water temperature required to heat the building on the coldest annual outdoor temperature.	70 to 230°F (21 to 110°C) Default = 180°F (82°C)
	Boil Max	Maximum boiler target temperature	120 to 225°F (48 to 107°C) Default = 210°F (99°C)
	Boil Min	Minimum boiler target temperature	80 to 180°F (26 to 82°C) Default = 130°F (54°C)
	Boil Mass (Mode 5 ONLY)	Thermal mass of boiler. This determines interstage delay and minimum on and minimum off times.	1 to 3 Default = 1
	Differential Temperature	To provide a modulation rate above and below the Boiler Target temperature. For example, if the value is 10°F and the Boiler Target is 160°F the boiler will begin to modulate at 150°F and shut off at 170°F.	Au, 2 to 42°F (Au, -16 to 5°C) Default = 10°F
	Stage Differential	Dictates the staging of the boiler and each stage is iterative. For example, if the value is 3°F. Stage 1 will be active 3°F below setpoint, Stage 1 & 2 will be active 6°F below setpoint.	Au, 2 to 42°F (Au, -17 to 6°C) Default = 10°F
	On Delay	Interstage delay to activate the next stage	0:10 to 8:00 minutes Default = 1:00 minute




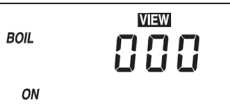
	Minimum On Time	Minimum on time for each stage	0:10 to 5:00 minutes Default = 0:30 minute
	Minimum Off Time	Minimum off time for each stage	0:10 to 5:00 minutes Default = 0:50 minutes
	Pump Delay	Boiler post pump time after burner has shut off, in seconds.	OFF, 0:20 to 9:55 min, On Default = 1:00 min
	Warm Weather Shutdown Temperature	Warm weather shutdown temperature using outdoor reset.	35 to 105°F, OFF (2 to 41°C, OFF) Default = 0:20 min
	Temperature Units	Select the desired unit of measurement	°F, °C Default = °F

16.7 MODE 6: EXTERNAL SEQUENCER OPERATION: VIEW DISPLAY

Mode 6 is intended for multiple appliance application and all stages are closed at all times. In essence there is no operator at the appliance. A removable jumper is provided in the electrical enclosure across the contacts to be used for connection to the remote operator. The fixed auto re-set limit is set to 230°F. In addition to the auto reset limit the factory installs a manual re-set limit set to 250°F. The control provides pump operation. Staging operation is provided by an external sequencing control. Heat demand provided via external analog input signal from Tekmar sequencing control (275). The control turns on the boiler pump and adjusts the number of stages being fired in proportion to the analog input signal. Note: Existing Tekmar sequencing control (264, 268) can be used to control the boiler staging. In this case, the BTC turns on the boiler pump and Stage 1 when an external heat demand is present. Stage 2, 3, and 4 are controlled by the sequencing control. Each control turns on its respective appliance pump and stage 1 contact whenever an external heat demand is present. Once the external heat demand is removed from the control, the control turns off the stage 1 contact and operates the pump to provide purging. Once the purge period is complete, the control turns off the appliance pump.

From the Home display;





- 1) Press **[ITEM]** to view the following parameters:

Display	Parameter Name	Parameter Description	Parameter Range
	Boiler Outlet Temperature	Real-time Outlet Temperature to Boiler	14 to 266°F (-10 to 130°C)
	Boiler Inlet Temperature	Real-time Inlet Temperature to Boiler	14 to 266°F (-10 to 130°C)
	Boiler Delta T	Real-time temperature difference between the outlet sensor and the inlet sensor.	-99 to 252°F (-72 to 140°C)
	Total Run Time Since Installation	Monitors the amount of operational time since the unit was installed. The first two digits are the number of thousands of hours and the three-digit display shows the number of hundreds of hours. Press (▲, ▼) simultaneously to reset the counter	Alternates between 00 and 999

16.8 MODE 6: EXTERNAL SEQUENCER OPERATION: ADJUST DISPLAY

From the Home display;

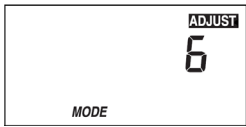- 1) Press (Item, ▲, ▼) simultaneously to view the following parameters:

Display	Parameter Name	Parameter Description	Parameter Range
	Mode	Operating mode for the boiler. NOTE: A complete description of each mode can be found in section 8.4 Modes of Operation in this manual.	1 to 6 Default = 1
	Boil Max	Maximum boiler target temperature	120 to 225°F (48 to 107°C) Default = 210°F (99°C)
	Pump Delay	Boiler post pump time after burner has shut off, in seconds.	OFF, 0:20 to 9:55 min, On Default = 1:00 min
	Temperature Units	Select the desired unit of measurement	°F, °C Default = °F



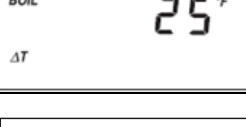

16.9 MODE 7 & 8: EXTERNAL TEMPERATURE TARGET OPERATION: VIEW DISPLAY


Mode 7 A removable jumper is provided in the electrical enclosure across the contacts to be used for connection to the remote operator. Heat demand provided via external analog input signal from EMS or tN4 system control (e.g. 420). The control turns on the boiler pump and operates the boiler to maintain the boiler target at the boiler **inlet** sensor whenever a heat demand is present. Once the external heat demand is removed from the control, the control turns off the stage 1 contact and operates the pump to provide purging. Once the purge period is complete, the control turns off the appliance pump.

Mode 8 A removable jumper is provided in the electrical enclosure across the contacts to be used for connection to the remote operator. Heat demand provided via external analog input signal from EMS or tN4 system control (e.g. 420). The control turns on the boiler pump and operates the boiler to maintain the boiler target at the **system** sensor whenever a heat demand is present. Once the external heat demand is removed from the control, the control turns off the stage 1 contact and operates the pump to provide purging. Once the purge period is complete, the control turns off the appliance pump.

From the Home display;

- 1) Press [ITEM] to view the following parameters:

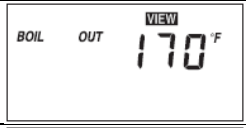








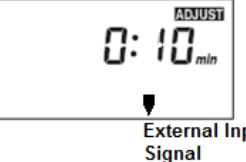
Display	Parameter Name	Parameter Description	Parameter Range
	Boiler Outlet Temperature	Real-time Outlet Temperature to Boiler	14 to 266°F (-10 to 130°C)
	Boiler Inlet Temperature	Real-time Inlet Temperature to Boiler	14 to 266°F (-10 to 130°C)
	Boiler Delta T	Real-time temperature difference between the outlet sensor and the inlet sensor.	-99 to 252°F (-72 to 140°C)
	Total Run Time Since Installation	Monitors the amount of operational time since the unit was installed. The two digits are the thousands of hours and the three-digit display shows the hundreds of hours. Press (▲, ▼) simultaneously to reset the counter	Alternates between 00 and 999



	Boiler Target Temperature	To provide a target setpoint for the heating system. Setpoint is controlled to the inlet sensor	OFF, 70 to 220°F (OFF,21 to 104°C)
---	---------------------------	---	------------------------------------

16.10 MODE 7 & 8: EXTERNAL TEMPERATURE TARGET OPERATION: ADJUST DISPLAY

From the Home display;

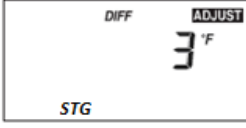- 1) Press (Item, ▲, ▼) simultaneously to view the following parameters:

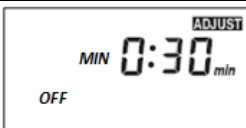Display	Parameter Name	Parameter Description	Parameter Range
	Mode	Operating mode for the boiler.	1 to 8 Default = 1
	Boil Max	Maximum boiler target temperature	120 to 225°F (48 to 107°C) Default = 210°F (99°C)
	Boil Min	Minimum boiler target temperature	80 to 180°F (26 to 82°C) Default = 130°F (54°C)
	Differential Temperature	To start the boiler below the Boiler Target temperature. For example, if the value is 10°F and the Boiler Target is 160°F the boiler will begin to modulate at 150°F and shut off at 170°F.	Au, 2 to 42°F (Au, -17 to 5°C) Default = 10°F
	Stage Differential	Dictates the staging of the boiler and each stage is iterative. For example, if the value is 3°F. Stage 1 will be active 3°F below setpoint, Stage 1 & 2 will be active 6°F below setpoint.	Au, 2 to 42°F (Au, -17 to 6°C) Default = 10°F
	On Delay	Interstage delay to activate the next stage	0:10 to 8:00 minutes Default = 1:00 minute
	Minimum On Time	Minimum on time for each stage	0:10 to 5:00 minutes Default = 0:30 minute
	Minimum Off Time	Minimum off time for each stage	0:10 to 5:00 minutes Default = 0:50 minutes
	Pump Delay	Boiler post pump time after burner has shut off, in seconds.	OFF, 0:20 to 9:55 min, On Default = 1:00 min
	External Input Signal (Mode 8 ONLY)	Select the range for the external input signal that adjusts the boiler target.	0:10 or 2:10 Default = 0:10

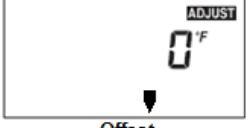	Offset	Select the amount of temperature offset to add to the boiler target calculated from the external input signal.	-10 to 10°F (-5 to 5°C) Default = 0°F
	Temperature Units	Select the desired unit of measurement	°F, °C Default = °F


17. IGNITION SYSTEM SAFETY SHUT-OFF DEVICE

After initial fill while the main burner is firing, shut off gas to the pilot and clock the time taken for the main gas valve to shut down. If the safety control is functioning properly, power to the gas valve will be shut off within 4 seconds of the pilot gas being shut off. If shut down takes longer, ignition control or gas valve may be defective.

18. LOW WATER TEMPERATURE SYSTEMS

In applications where the heating system requires supply water temperatures below 110°F, a bypass line must be installed upstream of the boiler pump so that outlet water can be re-circulated to raise the inlet temp to a minimum of 110°F. Balancing valves, preferably globe valves are used to adjust flow.

Figure 8: Low Water Temperature System

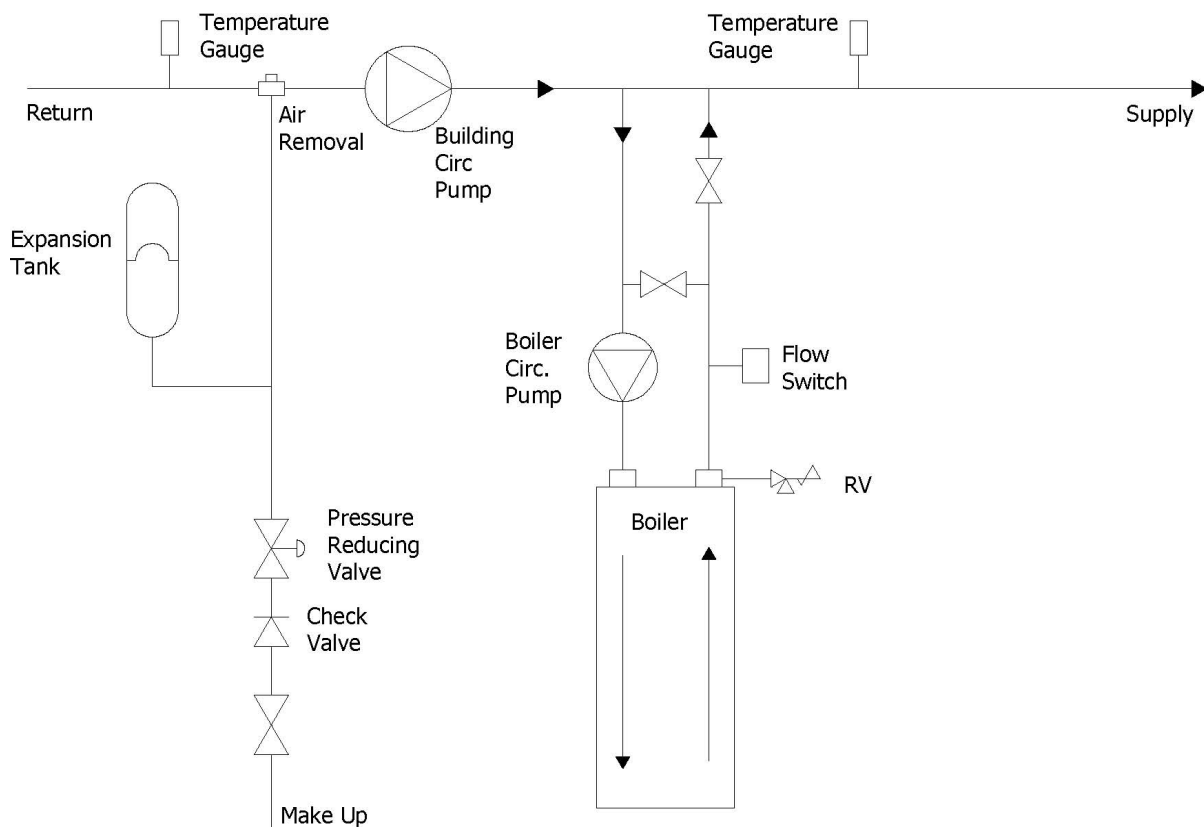


- Adjustment procedure.
 - a. Fully open bypass and outlet valves.
 - b. With boiler running, read inlet temperature after 15 minutes.
 - c. If the inlet temperature is less than 110°F (46°C) slowly close outlet valve until the inlet temperature climbs to 110°F (46°C)
 - d. If the inlet temperature is greater than 110°F (46°C) but not greater than 140 °F no further adjustment is required.
 - e. Check the inlet temperature after 5 minutes and make final adjustments.

19. INSTANTANEOUS WATER HEATER

An instantaneous water heater is designed to deliver hot water without the use of a storage tank. It is suitable for applications with variable load such as restaurants, condominiums, apartments, and motels. (See Figure 9) Call factory for recommendations. A flow through buffer tank at the heater discharge will greatly improve heater performance by eliminating short cycling and wide temperature swings in the supply temperature to the building.

Figure 9

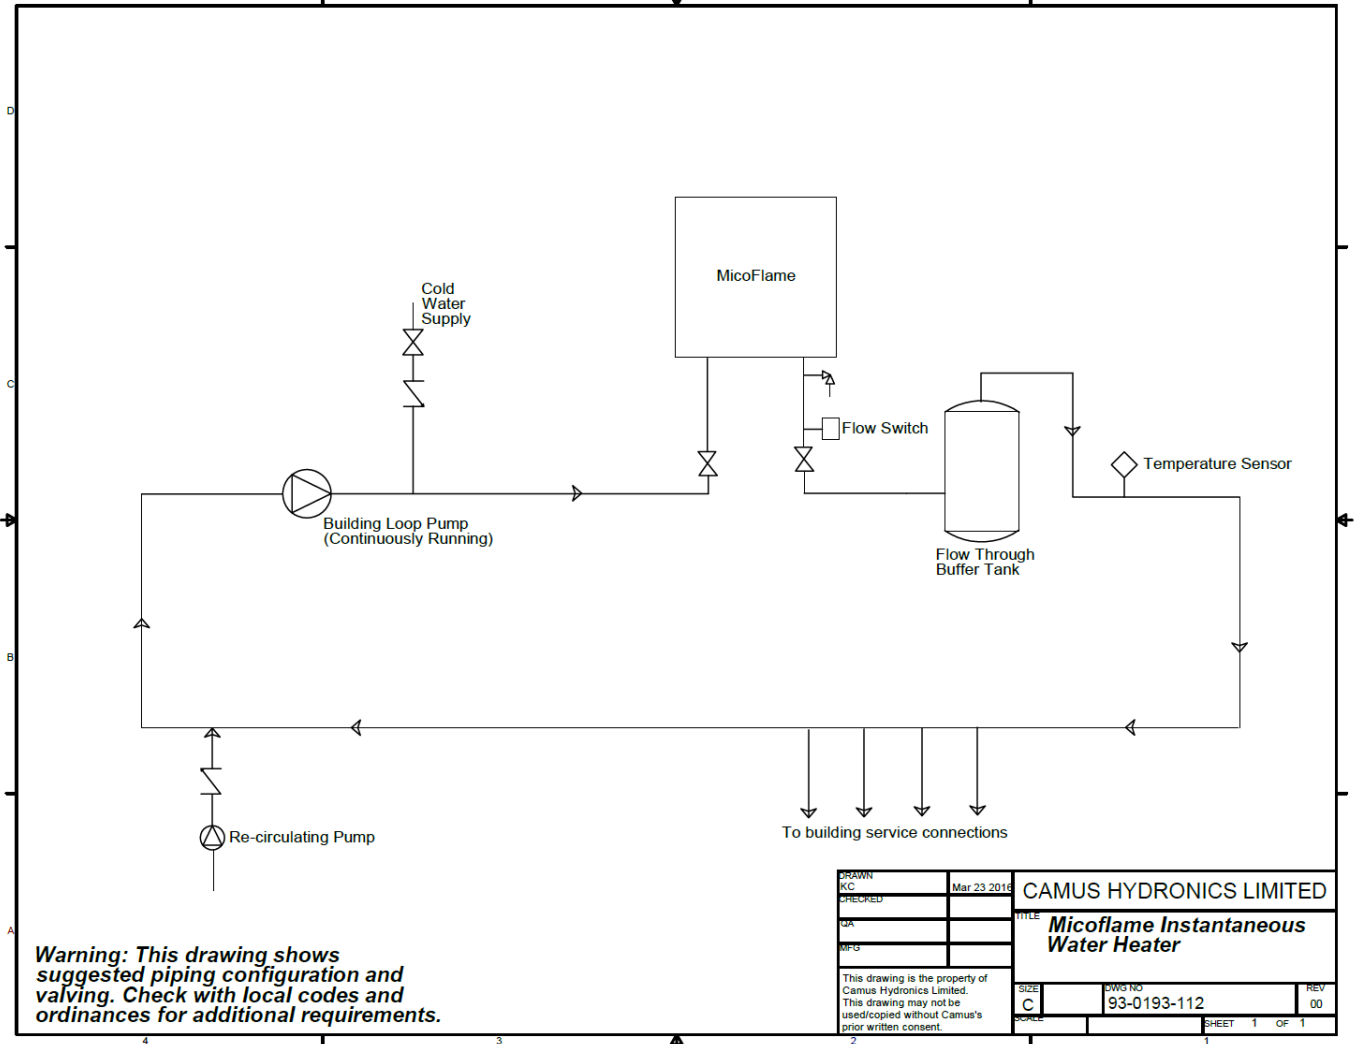

20. CONDENSING HEAT RECOVERY MODULE

The Micoflame could be provided in condensing mode for a variety of application including domestic hot water and hydronic space heating.

The CHRMs is intended to extract total (sensible and latent) heat from the flue gases downstream of the primary heat exchanger. As a result, condensation of moisture in the flue gas will take place on the CHRMs surfaces and in the exhaust vent. This condensation is a natural outcome when efficiencies exceed 90%.

A neutralizer cartridge is provided and must be installed in the line from the condensate collection point to the drain. PH level of the condensate is to be checked regularly and neutralizing medium is to be replaced as required to maintain effectiveness. A neutralizer cartridge is available from the factory.

Neutralizer medium is expected to last approximately three to six months depending on the amount of condensate produced.



- Condensate Produced, USgal/h = [KBtu/h Input / 100]

In higher temperature systems less condensate will be produced, extending the life of the neutralizer media. Media viability can be verified with pH test strips (i.e. litmus paper). Replace media as needed to maintain neutral state of discharged condensate, as required by code. The condensate disposal should also be checked for any sediment buildup and to make sure that it is clean and remains unobstructed.

Recommended installation methods of the condensing MicoFlame will vary depending on the application and the expected water temperature variation of the system.

Examples of recommended installation for typical applications are shown below:


Model	Secondary Flow USGPM	Total Flow USGPM	Head ΔP - Ft.	Thermostatic Control Valve
60-150	2.0	8.5	2.9	1"
200-300	4.0	17.0	3.6	1"
400-600	10.0	34.0	7.0	1"
800	16.0	44.4	7.6	1 1/2"
1000	20.0	55.5	5.7	2"
1200	24.0	66.7	6.2	2"
1400	28.0	77.8	7.1	2"
1600	32.0	88.9	8.2	2"
1800	36.0	100.0	9.2	2"
2000	40.0	105.0	10.0	2"
2000 (Grande)	40.0	113.0	8.54	2"
2500	50.0	141.0	8.6	3"
3000	60.0	170.0	10.7	3"
3500	40.0	198.0	17.2	3"
4000	40.0	198.0	17.2	3"

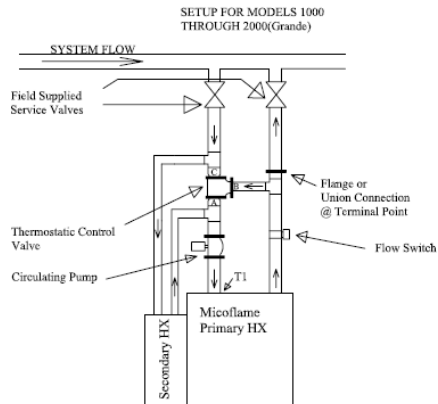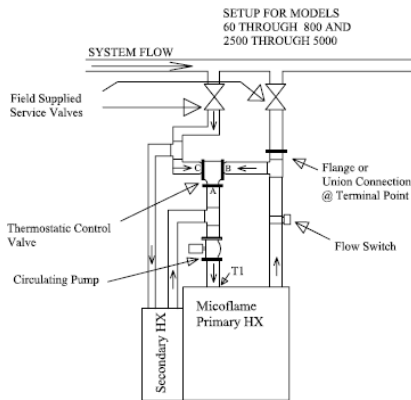

Notes:

1. Thermostatic valve set to maintain T1 at minimum of 130°F at boiler inlet.
2. Boiler firing rate to be field adjusted to prevent short cycling.
3. Proposed piping only. Final configuration subject to site requirements.
4. ↑ Indicates flow direction.
5. Specifications also apply to installations where secondary heat exchanger is not supplied.

DRAWN DP	CAMUS HYDRONICS LIMITED	
CHECKED	TITLE MicoFlame: Constant Volume Flow with Minimum Inlet Temperature Utilizing Thermostatic Valve, Heating Application	
DATE	SIZE C	DWG NO 93-0197
WFG	SCALE	REV 02
This drawing is the property of Camus Hydronics Limited. This drawing may not be used/copied without Camus's prior written consent.		
		SHEET 1 OF 1

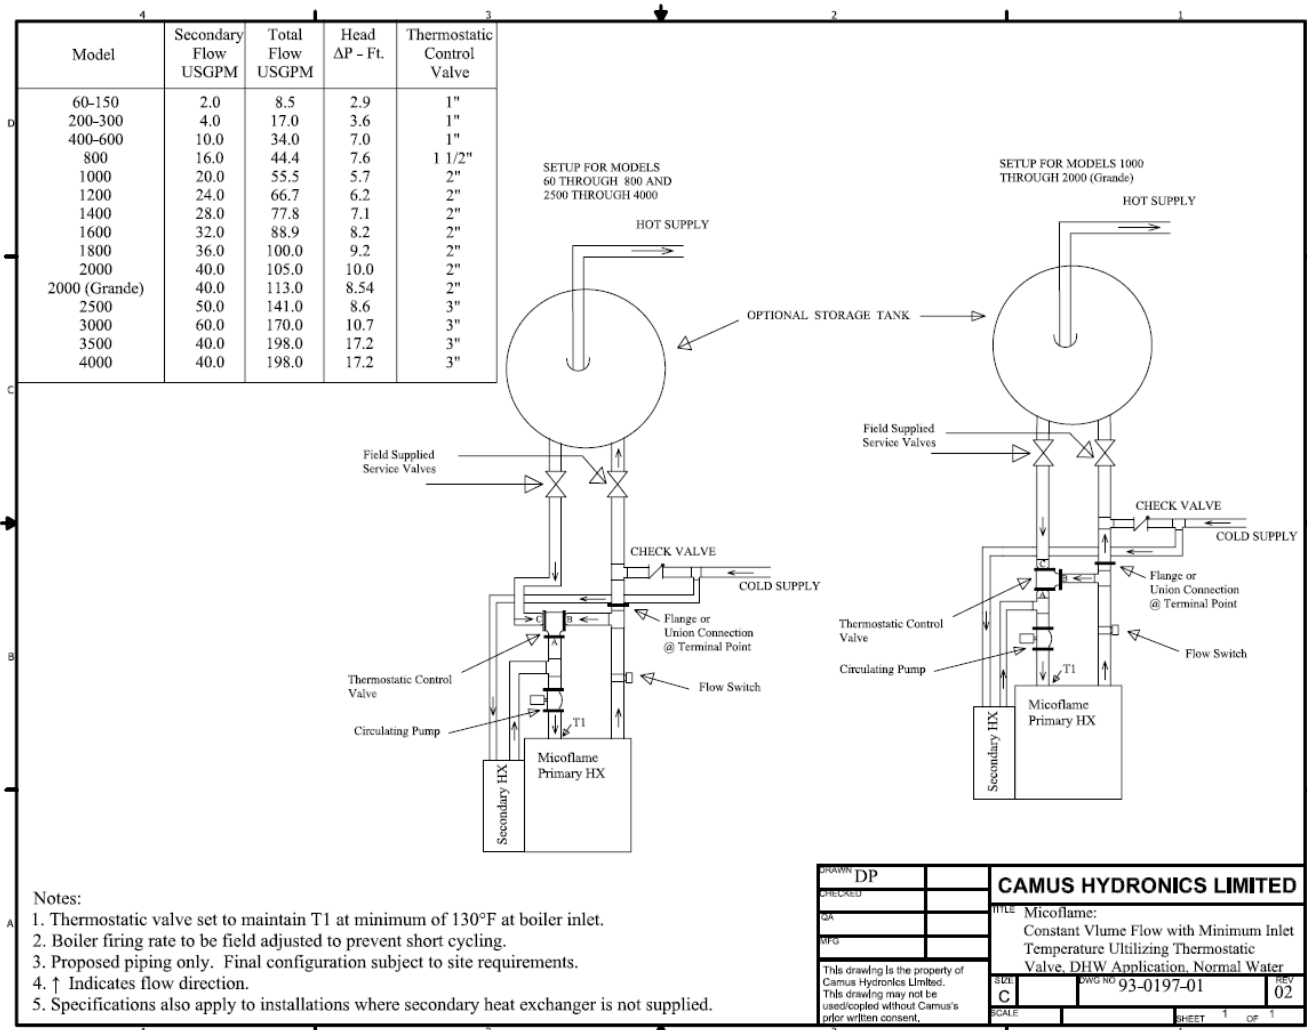

21. PILOT AND MAIN BURNER FLAMES


To maintain safe operation and the greatest efficiency of the boiler, check the main burner and pilot burner every six months for proper flame characteristics.

21.1 MAIN BURNER

The main burner, Figure 10 should display the following characteristics;

- Acceptable CO and CO₂ levels for complete combustion.
- Light off smoothly.
- Reasonably quiet while running.
- Stable flame with minimum of lifting.
- Blue flame with natural gas, yellow tips with propane gas

Figure 10: Main Burner

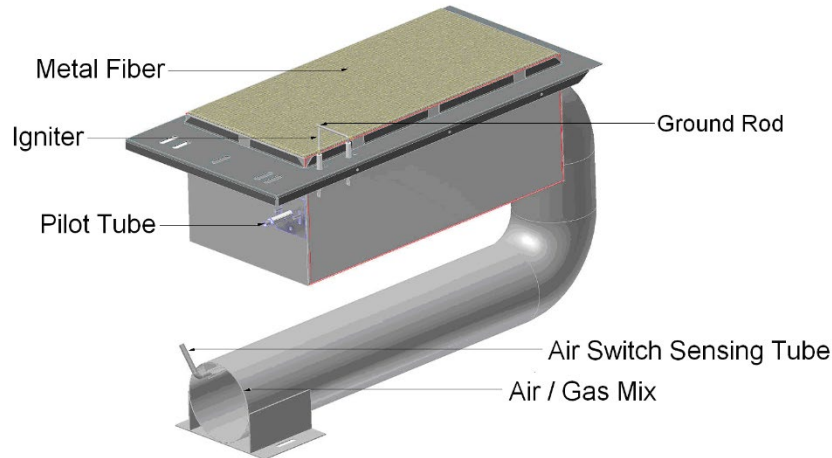

If burner characteristics do not match the above, check for proper air box pressure. Also look for accumulation of lint and other foreign material at fan air inlets. Typical air box settings are as follows: (a setting in brackets denotes condensing application):

MODEL	AIR BOX " W.C. (with burner firing)		FLUE SWITCH RECYCLE POINT " W.C	
	Left Burner	Right Burner	Left Burner	Right Burner
800	-	1.4 (1.7)	-	1.0 (1.4)
1000	-	1.9 (2.2)	-	1.5 (1.9)
1200	0.9 (1.1)	0.9 (1.1)	0.8 (0.9)	0.7 (0.9)
1400	0.9 (1.1)	1.4 (1.7)	0.7 (0.9)	1.1 (1.3)
1600	0.9 (1.1)	1.9 (2.2)	0.7 (0.9)	1.5 (1.8)
1800	1.6 (1.9)	1.6 (1.9)	1.2 (1.6)	1.2 (1.6)
2000	1.9 (2.2)	1.9 (2.2)	1.5 (1.9)	1.5 (1.9)

Depending on field conditions air box pressures will have to be adjusted accordingly. Always set the appliance for a CO₂ level in the range of 7.5% to 8.0 % for non-condensing appliances and 8.5% to 9.0% for condensing appliances. For propane fired appliances the setting will be approximately 1.5% higher.

A qualified service technician should follow this procedure when burner needs cleaning.

1. Shut off power and close main manual gas valve.
 - Allow burner to cool before removal.
2. Remove access cover screws.
 - Disconnect pilot gas at bulkhead fitting.
 - Disconnect ground wire and ignition wire.
 - Remove two wing nuts holding down burner.
 - Gently pull down and forward to disengage burner.
 - Remove burner being careful to not damage the igniter or ground electrodes.
3. Thoroughly clean burner. Check all ports and air channels for blockage.
4. Reinstall the burner being careful to fully engage the back of the burner box into the retaining slot in the combustion chamber base. Failure to properly locate the burner will result in erratic flame operation with the possibility of delayed ignition on light off.
5. Restore electrical power and gas supply to the boiler.
 - Following the lighting instructions put the boiler back into operation
 - Check for gas leaks and proper boiler and vent operation.

21.2 REMOVAL OF COMBUSTION CHAMBER LINING

The combustion chamber insulation in this appliance contains ceramic fiber material. Ceramic fibers can be converted to cristobalite in very high temperature applications. The International Agency for Research on Cancer (IARC) has concluded, "Crystalline silica in this form of quartz or cristobalite from occupational sources is carcinogenic to humans (Group 1)". Normal operating temperatures in this appliance are below the level to convert ceramic fibers to cristobalite. Abnormal operating conditions would have to be created to convert the ceramic fibers in this appliance to cristobalite.

The ceramic fiber material used in this appliance is an irritant; when handling or replacing the ceramic materials it is advisable that the installer follow these safety guidelines.

- Avoid breathing dust and contact with skin and eyes.
 - Use NIOSH certified dust respirator (N95). This type of respirator is based on the OSHA requirements for cristobalite at the time this documentation was written. Other types of respirators may be needed depending on the job site conditions. Current NIOSH recommendations can be found on the NIOSH website at <http://www.cdc.gov/niosh/homepage.html>. NIOSH approved respirators, manufacturers, and phone numbers are also listed on this website.
 - Wear long-sleeved, loose fitting clothing, gloves, and eye protection
- Apply enough water to the combustion chamber lining to prevent airborne dust.
- Remove the combustion chamber lining from the water heater and place it in a plastic bag for disposal.
- Wash potentially contaminated clothes separately from other clothing. Rinse clothes washer thoroughly.

NIOSH stated First Aid

- Eye: Irrigate immediately
- Breathing: Fresh air

21.3 PILOT BURNER


Turn the pilot firing valve to off position and allow the appliance to try for ignition. Observe the spark making sure that it is strong and continuous.

If the spark is not acceptable the igniter will have to be adjusted. This can be readily accomplished after removing the main burner.

The spark gap should be 1/8" to 3/16". Make sure that the electrodes do not appear overheated or fouled with carbon. It may be necessary to clean the ignition electrode using steel wool. Once the pilot appears to be properly set, reinstall it into the appliance making sure to properly tighten the pilot line connection.

If the pilot is removed from the main burner in the course of servicing the appliance, it is important to reinstall it so that there is no gap between the top surface of the pilot tube and the underside of the metal filter support screen. When properly set it will not be possible to slip a business card between the pilot burner and the support screen. Figure 11 shows the burner box assembly with the metal filter cover removed to expose pilot tube.

Figure 11

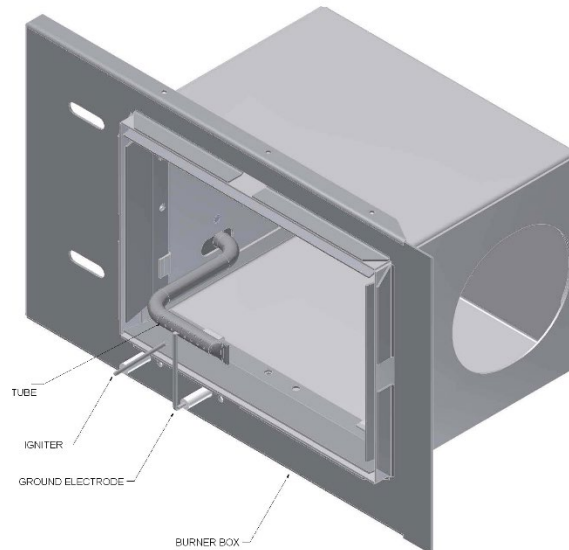

Pilot Pressure Setting

The pilot is preset at the factory. The following description is for the benefit of the start-up technician should minor adjustment be required.

The pilot burner is controlled by a separate pilot valve. Pilot pressure setting is as shown in Table 7. A view port is provided on the appliance's return end to view the pilot and the main burners. If adjustment is necessary the following steps must be followed: Remove the lower front jacket panel; Remove the 1/8" plug from the elbow pressure tap and connect a manometer; Remove regulator adjustment screw cap from the pilot valve; Rotate the regulator adjustment screw clockwise to increase the manifold pressure or counter-clockwise to decrease it; Once satisfied replace the regulator adjustment screw cap and the elbow pressure tap plug.

Table 4 – Gas pressures at inlet to pilot

	PROPANE	NATURAL GAS
Minimum (inches W.C.)	3.9	3.5
Maximum (inches W.C.)	9.3	4.5

Once the spark is satisfactory, open the pilot gas and allow the pilot burner to light. Once air has been purged from the pilot line, the pilot flame should appear almost instantly at the initiation of spark. Cycle the pilot several times to confirm reliability. A properly set pilot will appear blue and will engulf the igniter and ground electrode. (See Figure 13)

Open the firing valve and allow the main burner to light. The pilot must not extinguish. After running for 15 minutes, cycle the boiler to ensure that the pilot remains stable.

Pilot Flame Rectification Setting

The pilot flame rectification was preset at the factory. The following description is for the benefit of the start-up technician should minor adjustment be required. Set pilot to obtain best μA reading from flame rectification. Minimum average signal of 1.5 μA is required. If required, test the signal using a DC μA meter following this procedure for Honeywell S8600 ignition module: Disconnect ground wire at appliance transformer; Disconnect the 24V power and ground wires from all S8600 ignition modules not being tested; Set meter to μA DC: Connect one of the meter's terminals to the burner ground terminal on the S8600 and the other terminal to the burner ground wire; Pilot running without main burner will generate 1.5 μA average for best operation. With main burner running, the signal will be in a range of 4.0 to 7.0 μA .

22. OPERATION AND SERVICE

OPERATION

Before operating the boiler, the entire system must be filled with water, purged of air and checked for leaks. Do not use Stop leak or other boiler compounds. The gas piping must also be leak tested.

Any safety devices including low water cutoff, flow switch and high limit used in with this boiler must receive periodic inspection (every six months) to assure proper operation. A low water cutoff of the float type should be flushed every six months. All relief valves should be inspected and manually operated every six months.

For your safety follow the lighting and operating instructions below and on the boiler.

To turn on main burner, slowly open firing valve after pilot is established.

Set primary system controller to desired temperature.

To turn off boiler close main manual gas valve, close pilot manual valve and turn off electric power to system.

SERVICE

Disconnect main power and turn off gas supply before servicing unit.

To remove and clean the burner, follow the detailed procedure in section 19.1 of this manual

After the first season of operation inspect the heat exchanger and venting. Follow the detailed instructions in section 6 of this manual.

CAUTION: Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.

Any audible sounds in the equipment, like pinging, crackling or hissing are indications of scaling or lack of sufficient water flow. Under these conditions the boiler must be shut down immediately and the heat exchanger checked for damage. If the exchanger is damaged from scaling, it is not covered by warranty.

Should your equipment be subjected to fire, flood or some other unusual condition, turn off all gas and electrical supply. If you are unable to turn off the gas, call your gas company or gas supplier at once. Do not put the unit back in operation until it has been checked by a qualified agency to ensure that all controls are functioning properly.

Units that are not operated for a period of 60 days or more are considered seasonal operations. It is recommended that before returning one of these units to service, the proper operation of all controls be checked by a qualified service technician.

23. LIGHTING INSTRUCTIONS

1. Turn off electric power to boiler.
2. Close main manual valve and main firing valve and wait 5 minutes.
3. Set primary system controller to desired temperature.
4. Open pilot valve.
5. Turn on electric power to boiler. The electrode at the pilot should begin to spark after pre-purge is complete. The pilot valve will open to permit gas flow to the pilot.
6. There is a 15 second trial for ignition, which is enough time to light the pilot if air is not present in the pilot line. If pilot fails to light and you suspect air in the line, close the main manual valve and repeat lighting steps 1 thru 5.
7. Once the pilot lights, it should envelope the ignition rod and ground electrode. The pilot can be adjusted by removing the pilot regulator cover and turning the adjustment screw counter clockwise to decrease it or clockwise to increase it.
8. Open the main manual and main firing valves to allow gas to reach the main burner. If the main burner fails to ignite, turn the firing valve off and check to see that the pilot is burning. If not, repeat lighting procedure steps 1 thru 7.


TO TURN OFF BOILER: Close main manual valve and main firing valve and turn off electric power to system.

24. TROUBLE SHOOTING GUIDE

SYMPTOM	SOLUTION
1. Power light is not lit when switch is flipped to "ON"	<ul style="list-style-type: none"> • Check wiring to switch. • Check circuit breaker. • Check fuse.
2. Water flow light remains off.	<ul style="list-style-type: none"> • Verify that pump is running. • Check wiring to flow switch.
3. Pilot sparks but does not light	<ul style="list-style-type: none"> • Verify that main manual valve is open. • Follow lighting instructions to bleed air out of pilot line. • Remove main burner and inspect for moisture or dirt in pilot or in pilot line. • Verify that pilot is sealed to main burner base. • Verify that gas connections are tight.
4. Pilot lights momentarily, goes out and then sparks again repeatedly	<ul style="list-style-type: none"> • Observe pilot for proper flame. Adjust if necessary. • Check pilot flame signal. Properly set pilot to generate 1.5 μA. D.C. on average. • Remove main burner and ensure that igniter and ground electrodes are positioned properly. Clean with steel wool if necessary. • Verify that back of burner box is fully engaged into the retaining slot in the combustion chamber base.
5. Pilot lights but main burner does not fire.	<ul style="list-style-type: none"> • Verify that high limit is set high enough to prevent short cycling. • Check pilot flame signal (μA). • Adjust pilot pressure for steady flame • Remove main burner. Check position of igniter and ground electrode. Clean with steel wool if necessary.
6. Main burner lights but cycles off after a few minutes	<ul style="list-style-type: none"> • Verify that high limit is set high enough to prevent short cycling. • Adjust pilot pressure for steady flame • Remove main burner. Adjust pilot shield and clean ignition sensor.
7. Boiler starts to whine as the temperature rise increases.	<ul style="list-style-type: none"> • Verify that all air is bled from system. • Verify that the static pressure in cold system is at least 15 psig. • Check temperature rise across boiler to ensure adequate water flow. • If necessary, increase static water pressure and decrease gas pressure.

25. TYPICAL GAS TRAIN


Figure 12

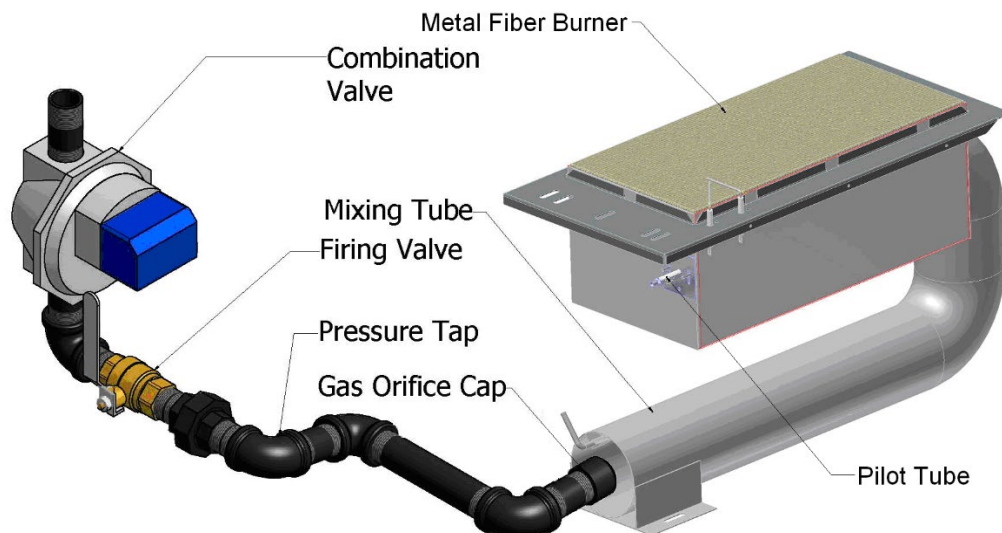


26. ELECTRICAL DIAGRAMS

Each MicoFlame series 2 boiler will be provided with its own wiring diagram to guarantee that any options ordered with the unit are properly detailed.

The following diagrams 99-5072 and 99-5082 are provided as typical samples only.

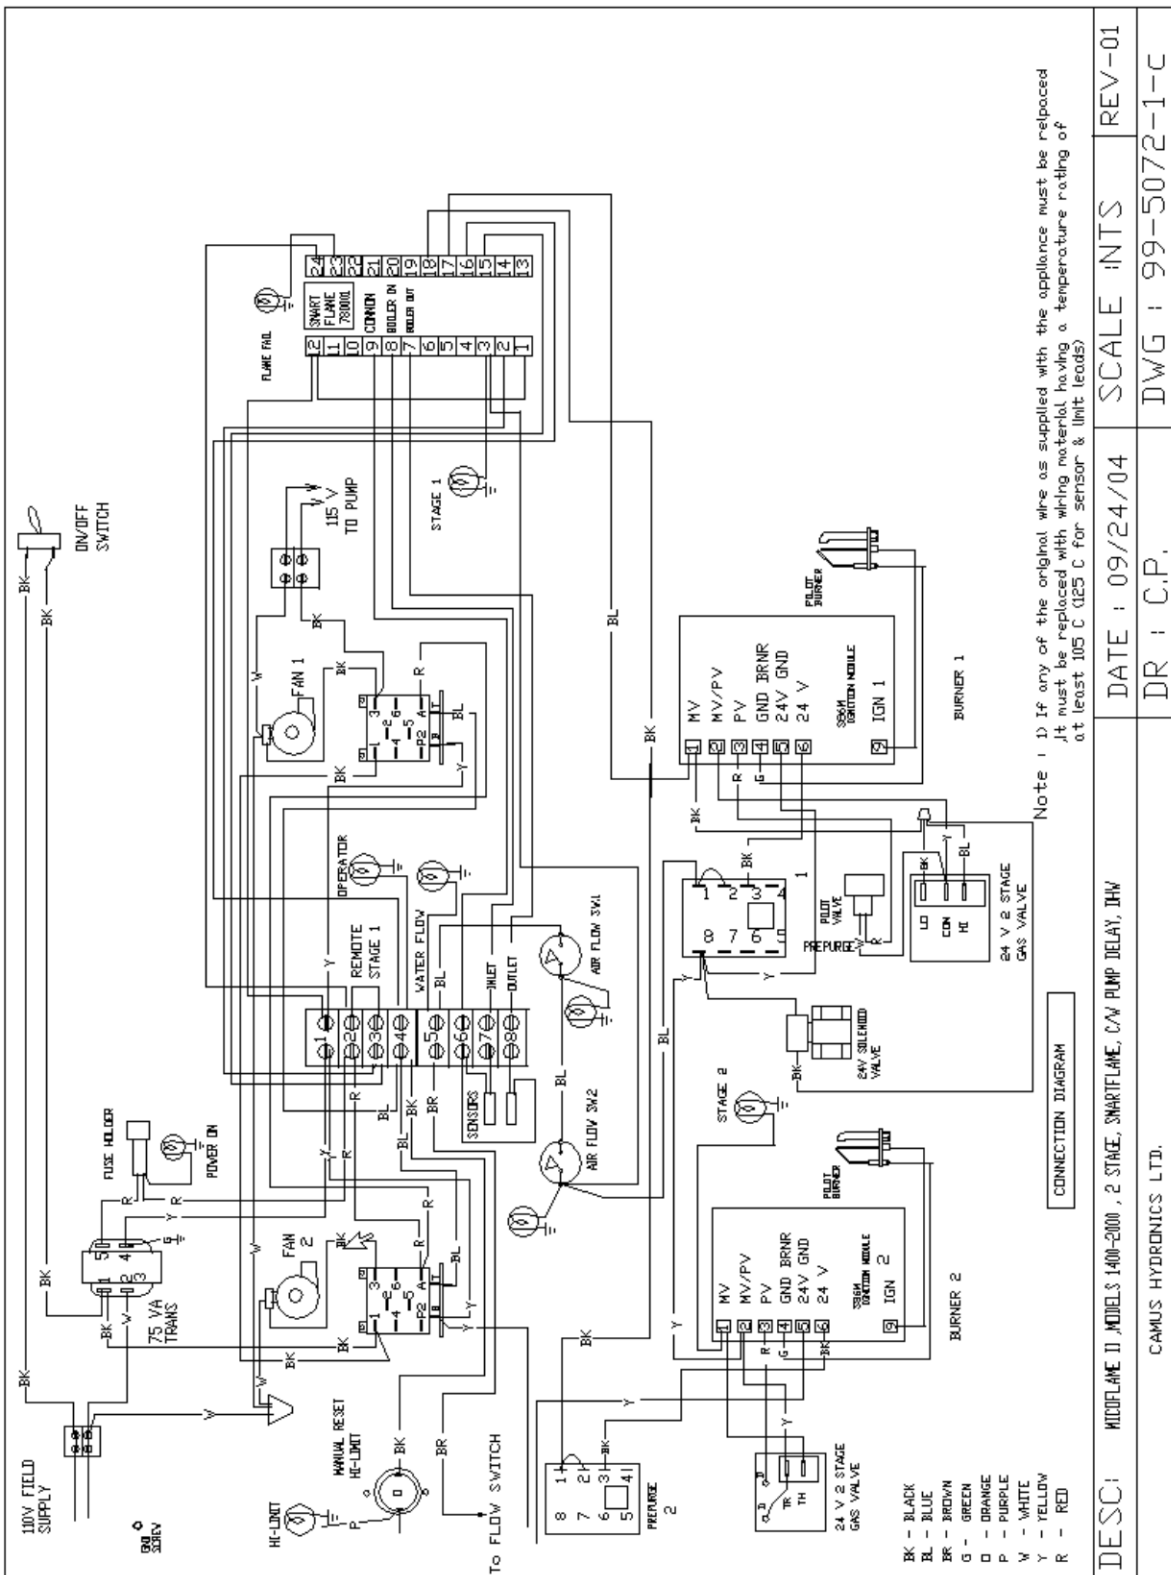

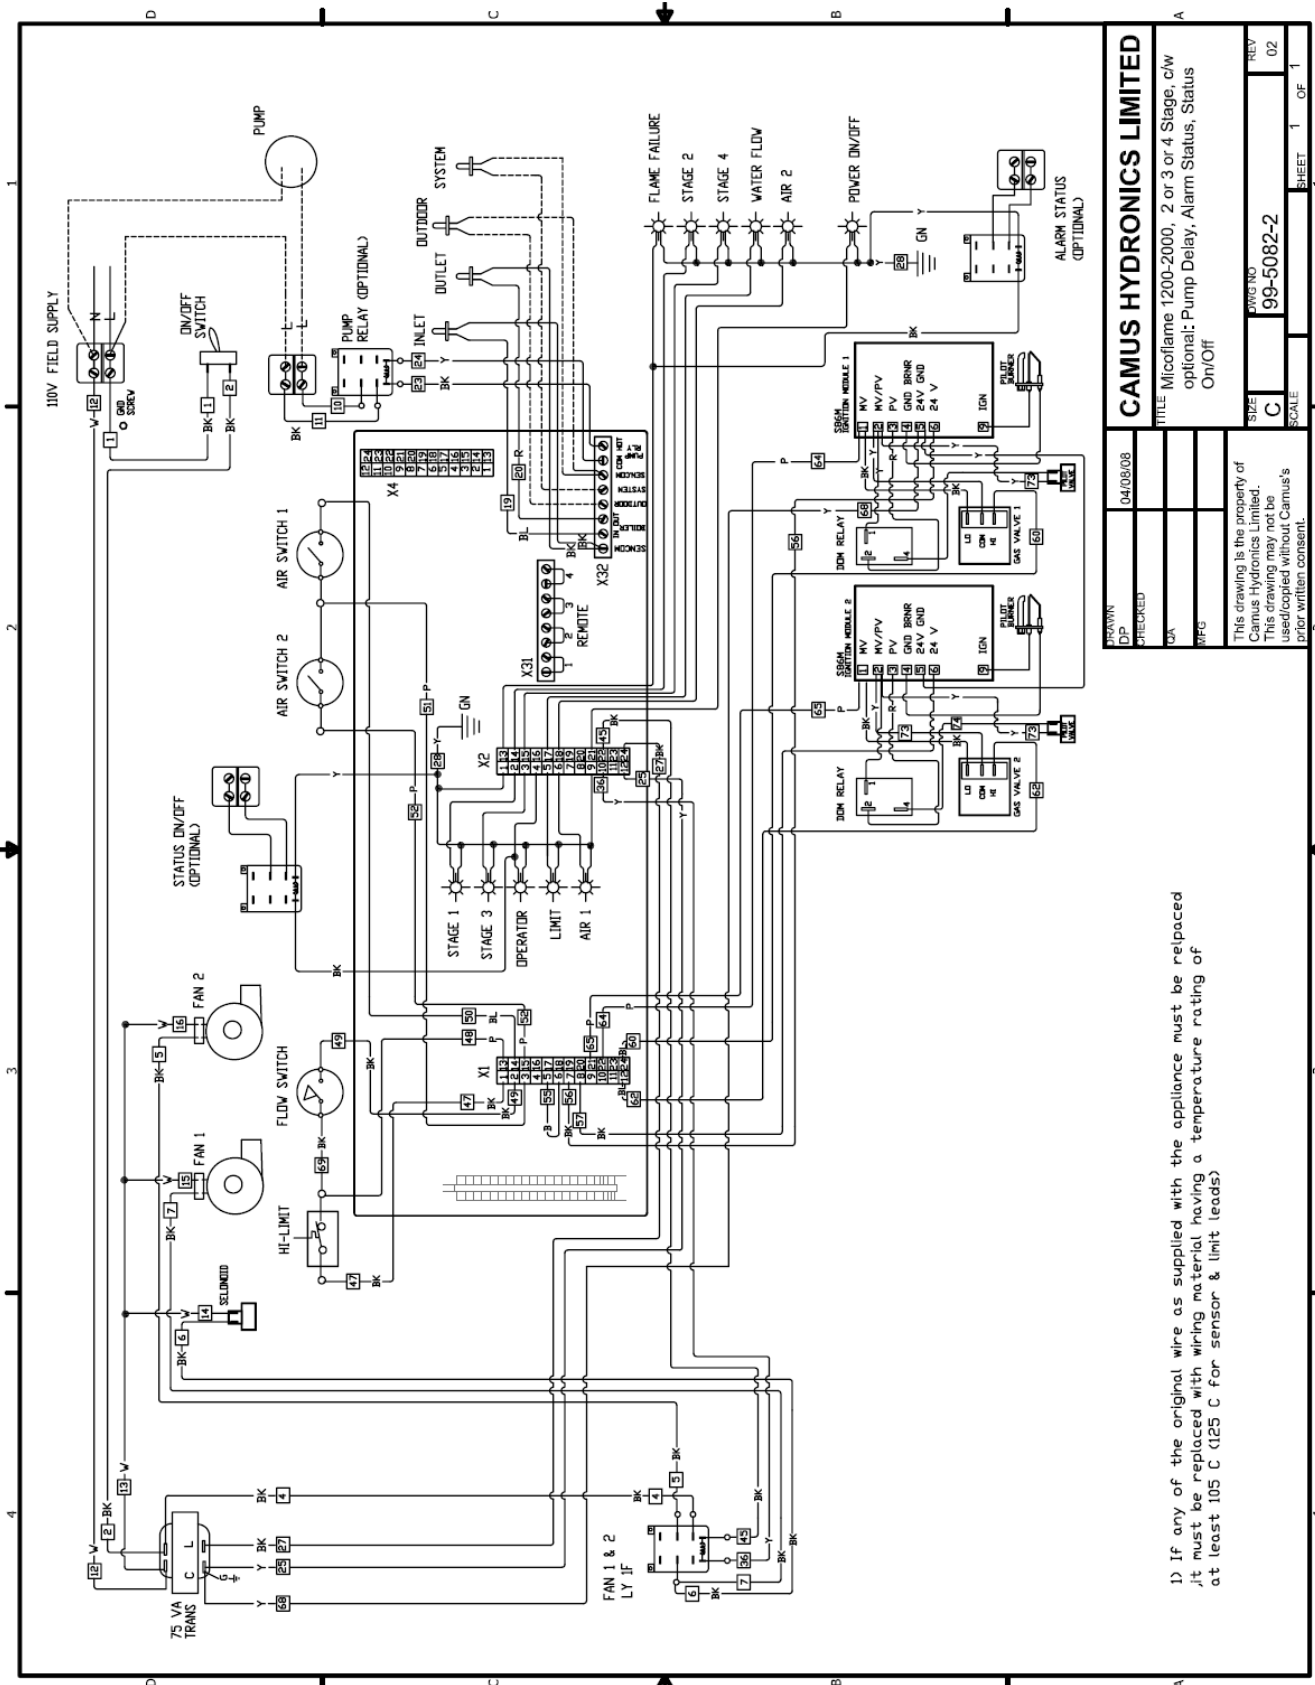


CAMUS HYDRONICS LIMITED	
TITLE: Microflame 1200-2000, 2 or 3 or 4 Stage, c/w optional: Pump Delay, Alarm Status, Status On/Off	
DATE: 04/08/08	REV: 02
DWG NO: 99-5082-2	SCALE: 1 OF 1
SHEET 1 OF 1	

1) If any of the original wire as supplied with the appliance must be replaced it must be replaced with wiring material having a temperature rating of at least 105 C (125 C for sensor & limit leads)

This drawing is the property of Camus Hydronics Limited. This drawing may not be used/copied without Camus's prior written consent.


Tekmar BTC-4PA Electrical Connections

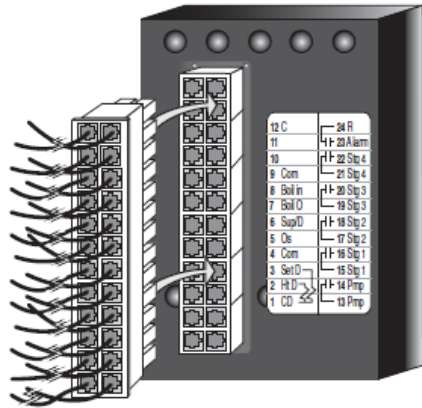


12 C	24 R
11	4-23 Alarm
10 +Vdc	22 Stg 4
9 Com(-)	21 Stg 4
8 Boil in	20 Stg 3
7 Boil O	19 Stg 3
6 Sys/D	18 Stg 2
5 Outdr	17 Stg 2
4 Com	16 Stg 1
3 Pr D	15 Stg 1
2 Ht D	14 Pmp
1 CD	13 Pmp

Tekmar BTC-4PA		
Terminal #	Label	Description
1	CD	Unused
2	HtD	Call for heat signal
3	Pr D	Proof Demand to signal pilot is active
4	Com	Common terminal for Outdoor, System and/or DHW sensors
5	Outdr	10kΩ outdoor sensor
6	Sys/D	10kΩ system or DHW sensor
7	Boil O	10kΩ boiler outlet sensor
8	Boil in	10kΩ boiler inlet sensor
9	Com	Common terminal for boiler outlet and inlet sensor
10	+Vdc	+Vdc for Modes 6, 7 for setpoint input
11	--	Unused
12	C	24Vac return for Tekmar BTC
13	Pmp	Normally open pump contacts, closes on a call for heat
14	Pmp	
15	Stg 1	Stage 1 burner contacts
16	Stg 1	
17	Stg 2	Stage 2 burner contacts
18	Stg 2	
19	Stg 3	Stage 3 burner contacts
20	Stg 3	
21	Stg 4	Stage 4 burner contacts
22	Stg 4	
23	Alarm	Alarm signal, closes in the event of a fault (24Vac)
24	R	24vac supply for Tekmar BTC


27 EXPLODED VIEW

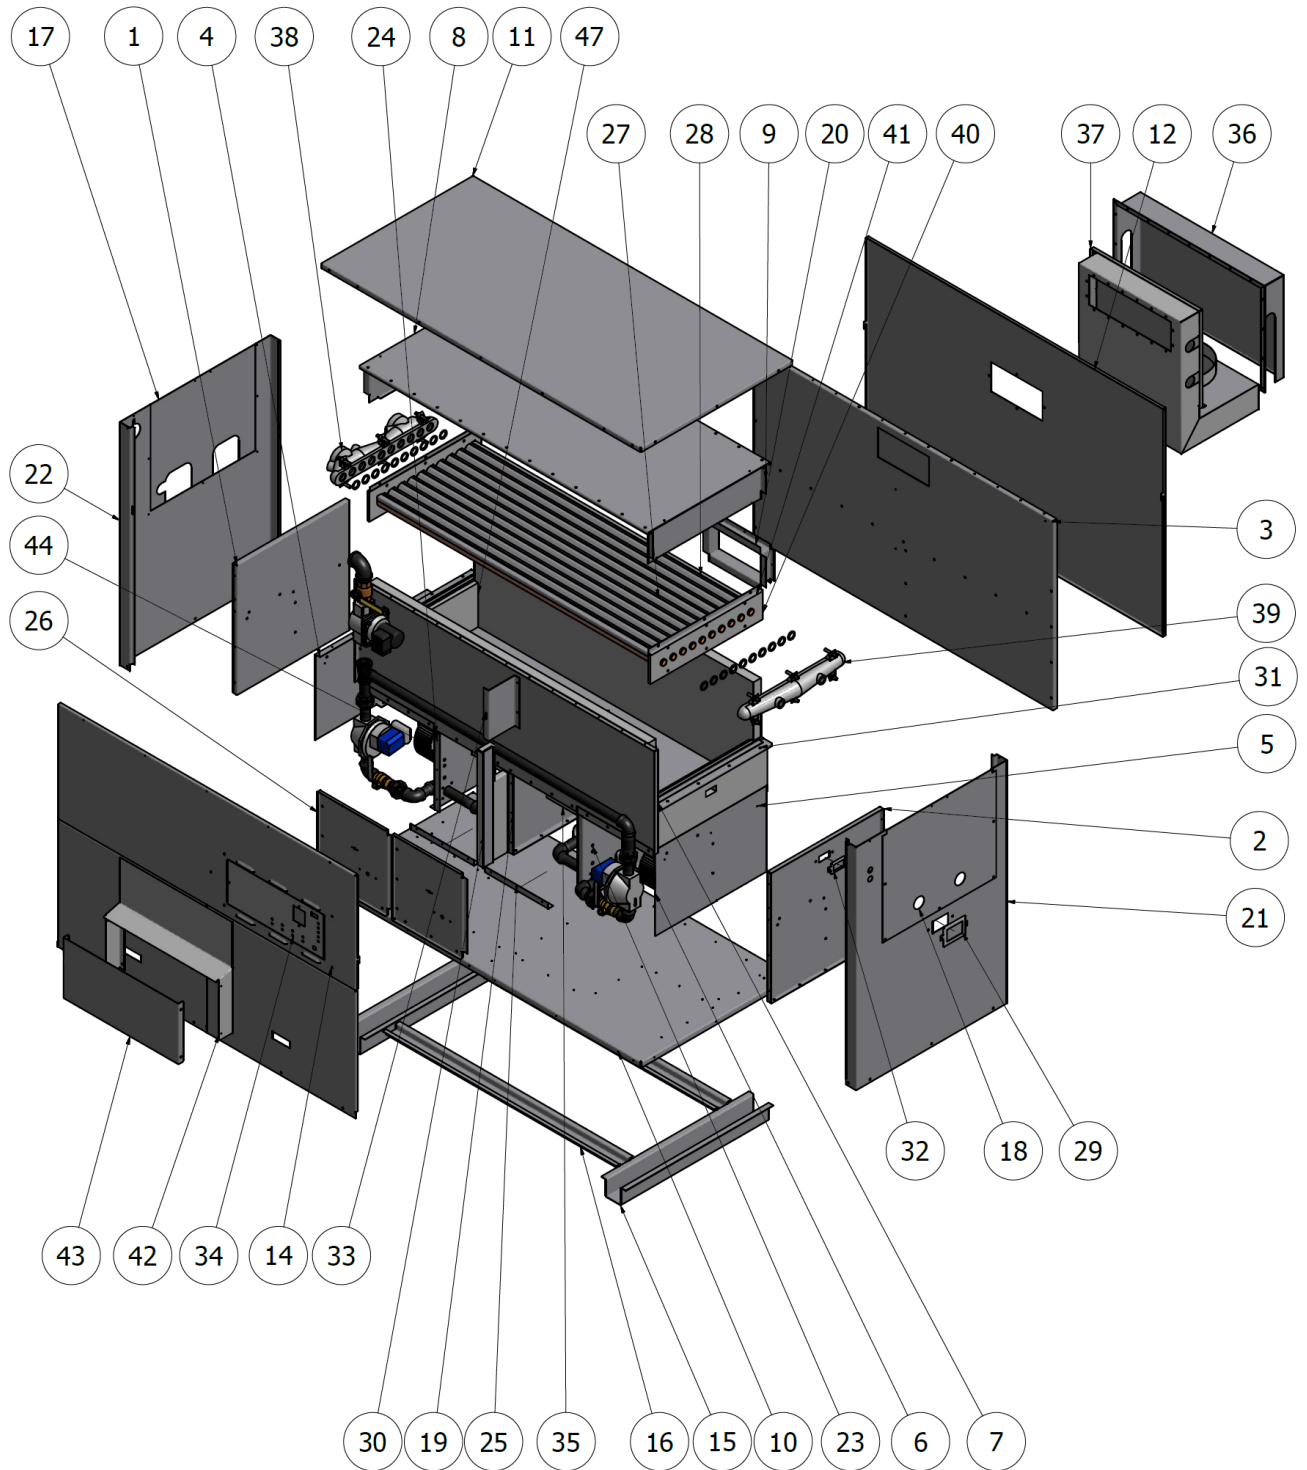

MicoFlame Series 2 Gas Train

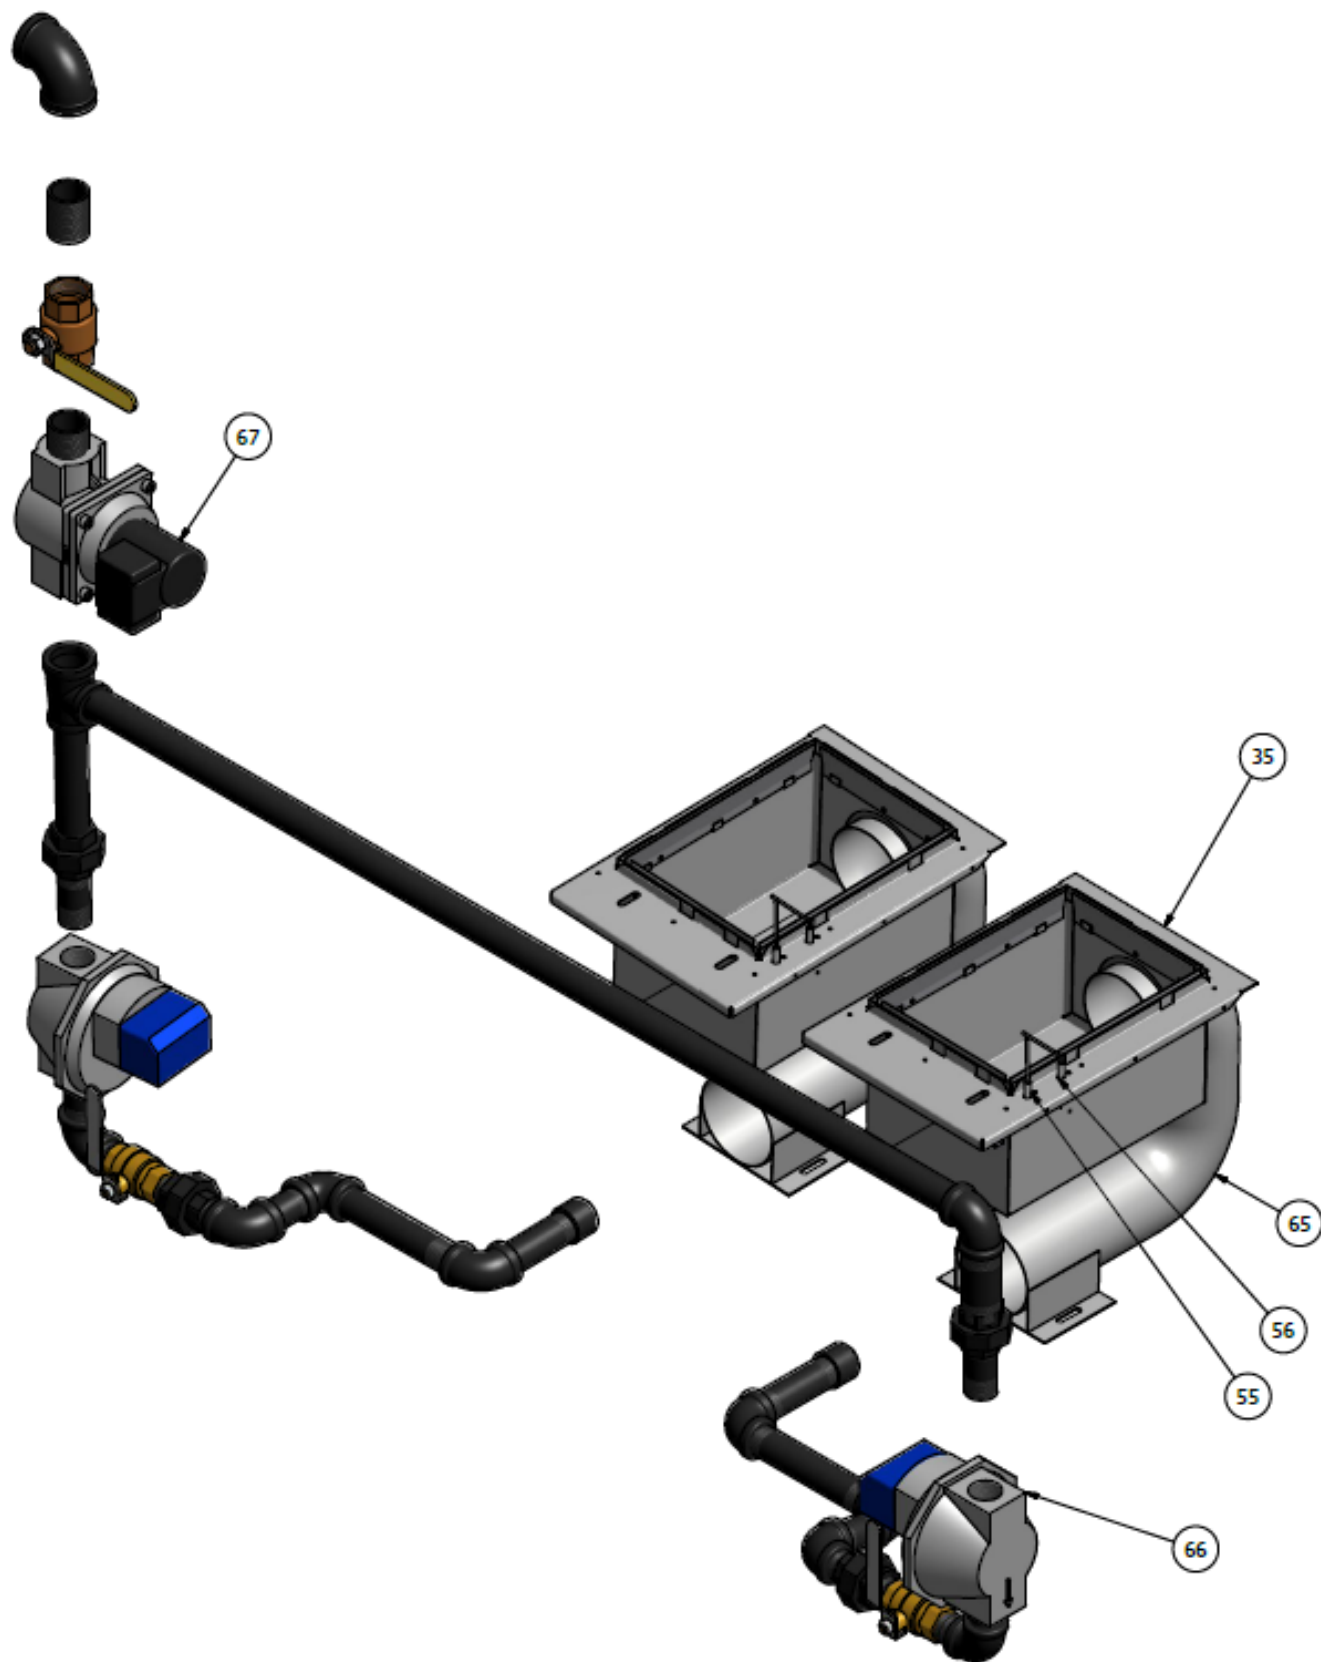

MicoFlame Series 2 Model 800 – 1000 Control Box

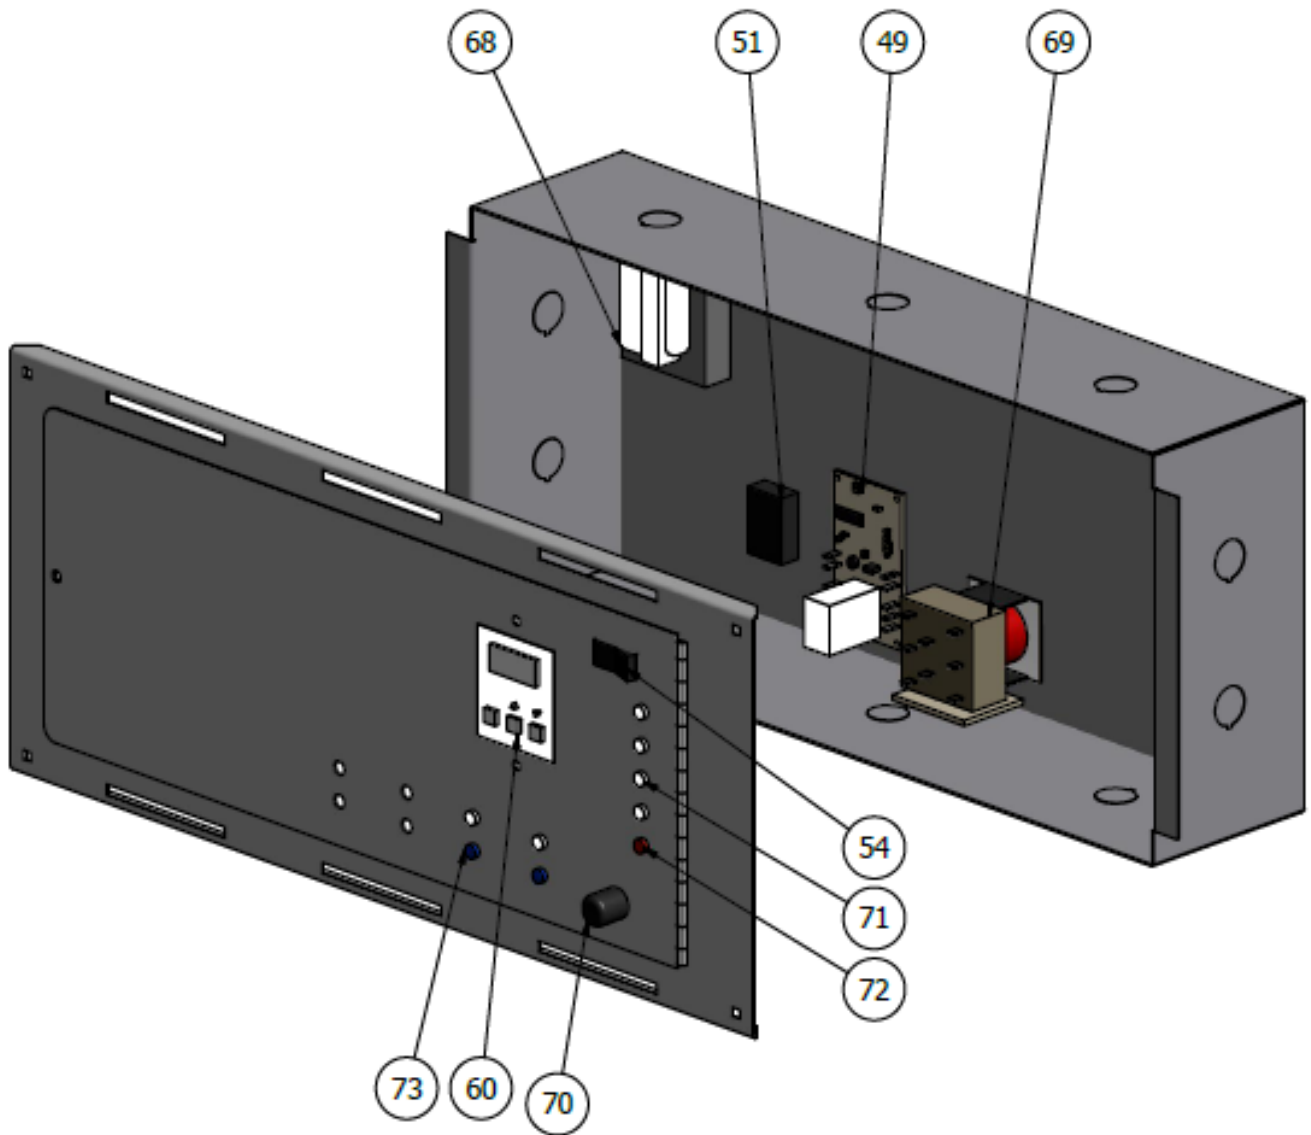

28 MICOFLAME REPLACEMENT PARTS LIST

Item #	Part Description	MicoFlame II Model Size							
		800	1000	1200	1400	1600	1800	2000	
1	Combustion Chamber End Panel - Left	14-4100							
2	Combustion Chamber End Panel - Right	14-4101-08-10			14-4101-12-20				
3	Combustion Chamber Rear Panel- Non Condensing	14-4102-08	14-4102-10	14-4102-12	14-4102-14	14-4102-16	14-4102-18	14-4102-20	
	Combustion Chamber Rear Panel- Condensing	14-4102-08-51	14-4102-10-51	14-4102-12-51	14-4102-14-51	14-4102-16-51	14-4102-18-51	14-4102-20-51	
4	Combustion Chamber Support - Left	14-4103							
5	Combustion Chamber Support - Right	14-4104-08-10			14-4104-12-20				
6	Combustion Chamber Base Panel	14-4105-08	14-4105-10	14-4105-12	14-4105-14	14-4105-16	14-4105-18	14-4105-20	
7	Combustion Chamber Upper Front Panel	14-4106-08	14-4106-10	14-4106-12	14-4106-14	14-4106-16	14-4106-18	14-4106-20	
8	Flue Collector Top	14-4107-08	14-4107-10	14-4107-12	14-4107-14	14-4107-16	14-4107-18	14-4107-20	
9	Flue Collector End Bracket	14-4108							
10	Base Panel	14-4109-08	14-4109-10	14-4109-12	14-4109-14	14-4109-16	14-4109-18	14-4109-20	
11	Outer Jacket Top Cover	14-4110-08	14-4110-10	14-4110-12	14-4110-14	14-4110-16	14-4110-18	14-4110-20	
*12	Outer Jacket Back Panel- Condensing	14-4111-08-51	14-4111-10-51	14-4111-12-51	14-4111-14-51	14-4111-16-51	14-4111-18-51	14-4111-20-51	
	Outer Jacket Back Panel- Non Condensing/Outdoor	14-4111-08-61	14-4111-10-61	14-4111-12-61	14-4111-14-61	14-4111-16-61	14-4111-18-61	14-4111-20-61	
13	Outer Jacket Lower Front Panel (2 Required Per Unit)	14-4112-08	14-4112-10	14-4112-12	14-4112-14	14-4112-16	14-4112-18	14-4112-20	
14	Outer Jacket Upper Front Panel	14-4113-08	14-4113-10	14-4113-12	14-4113-14	14-4113-16	14-4113-18	14-4113-20	
15	Leg	14-4114							
16	Stiffener	14-4115-08	14-4115-10	14-4115-12	14-4115-14	14-4115-16	14-4115-18	14-4115-20	
17	Inlet Outlet Side Access Panel	14-4116							
18	Return Side Access Panel	14-4117							
19	Combustion Chamber Support - Centre	N/A			14-4118-12-20				
*20	Flue Collector Outlet- Non Condensing	14-4119-08-10			14-4119-12-16			14-4119-18-20	
	Flue Collector Outlet- Condensing	14-4120-08-10-51			14-4120-12-20-51				
21	Outer Jacket Side Panel - Right	14-4131							
22	Outer Jacket Side Panel - Left	14-4132							

23	Fan Mounting Support - Right	N/A			14-4133			
24	Fan Mounting Support - Left	14-4139						
25	Burner Door Stop	14-4134-08	14-4134-10	14-4134-12	14-4134-14	14-4134-16	14-4134-18	14-4134-20
26	Burner Door	14-4140-08	14-4140-10	14-4140-12	14-4140-14	14-4140-16	14-4140-18	14-4140-20
27	V Baffles (800-1200 9 Required per Unit, 1400-2000 18 Required per Unit)	14-4141-08	14-4141-10	14-4141-12	14-4141-14	14-4141-16	14-4141-18	14-4141-20
28	HX Front and Back Baffles (2 Required per Unit, 1 front and 1 back)	14-4142-08	14-4142-10	14-4142-12	14-4142-14	14-4142-16	14-4142-18	14-4142-20
29	Outer Jacket Sight Glass Frame	14-4151						
30	Outer Jacket Door Jam	14-4152						
31	Heat Exchanger Support Weldment (2 Required Per Unit)	14-4153						
32	Inner Jacket Sight Glass Frame	14-4154						
33	Outer Jacket Top Panel Support	14-4155						
34	Control Panel Assembly	14-4160						
35	Two Tile Burner Box Assembly	N/A			14-4125-02		N/A	
	Three Tile Burner Box Assembly	14-4125-03						
36	Economizer Cover	14-4146-08-10		14-4146-18-20			14-4165-01	
37	Economizer Assembly	14-4148-03		14-4166-01				
38	Inlet/Outlet Header	15-5004						
39	Return Header	15-5005						
40	Header Bar	15-4157						
41	Header Bar Stop (2 Required Per Unit)	14-4138						
42	Control Panel Outer Cover	14-4171						
43	Control Panel Outer Cover Door	14-4172						
44	Blower Assembly	55-0001						
45	Ignition Module Continuous	S8610M3017						
46	Ignition Module Single Try	S8610043010						
47	Refractory Set	800-RFRS	1000-RFRS	1200-RFRS	1400-RFRS	1600-RFRS	1800-RFRS	2000-RFRS
48	Donut Gasket	CH010						
49	Pre-Purge Card	TTMOR24A1X7						
50	30 Second Delay on Make	24-IMS24AaX30						
51	Pump Delay Relay	LY1F24VAC						

52	Pilot Solenoid	CV100B6N-22-0001						
53	Red Strip Gasket	Red Silicone Sponge Gasket						
54	On/Off Switch	C6000ALBB/G74/W46						
55	Igniter (Right hand pilot)	N/A	N/A	PSE-CH8	PSE-CH8	PSE-CH8	PSE-CH8	PSE-CH8
	Igniter (Left hand pilot)	66-0117	66-0117	N/A	N/A	66-0117	66-0117	66-0117
56	Flame Sensor (Right hand pilot)	N/A	N/A	PSE-CH7	PSE-CH7	PSE-CH7	PSE-CH7	PSE-CH7
	Flame Sensor (Left hand pilot)	66-0116	66-0116	N/A	N/A	66-0116	66-0116	66-0116
*57	Ceramic Pilot Assembly (NG)	66-0107						
	Mesh Pilot Assembly (NG)	66-5013						
*58	Ceramic Pilot Assembly (LP)	66-0108						
	Mesh Pilot Assembly (LP)	66-5014						
59	Ignitor Module (Continuous)	S8610M3017						
	Ignitor Module (Single Try)	S8600112010						
60	Tekmar Controller (STG)	BTC4PA						
61	Air Switch	IS3010106-5769A						
62	Low Gas Switch (Not Shown in Exploded View, in Boiler Price Book)	C6097A1012						
63	High Gas Switch (Not Shown in Exploded View, in Boiler Price Book)	C6097B1028						
64	115/24V AC Transformer	HCT-01J28807						
65	Mixing Tube (2 Required per Unit)	MF1-GMTM-04-CH						
66	Gas Valve (left)	V8944B1092	V8944B1100	V8944B1092	V8944B1092	V8944B1092	V8944B1092	V8944B1100
	Gas Valve (right)	N/A	N/A	V8944B1092	V8944B1092	V8944B1100	V8944B1092	V8944B1100
67	Solenoid Valve (left)	K3A462U	V4295A1049				V4295A1056	
68	Transformer	HCT-01J2BB07						
69	Fan Manager	ST82D1004						
70	Breaker (4 AMP)	W28-XQ1A-4						
71	White Indicator LED	LXR5010UW42149						
72	Red Indicator LED	LXR5010UB28230						
73	Blue Indicator LED	LXR5010S128230						

WARRANTY

GENERAL

Camus® Hydronics Limited (“Camus®”), extends the following LIMITED WARRANTY to the owner of this appliance, provided that the product has been installed and operated in accordance with the Installation Manual provided with the equipment. Camus® will furnish a replacement for, or at Camus® option repair, any part that within the period specified below, shall fail in normal use and service at its original installation location due to any defect in workmanship, material or design. The repaired or replacement part will be warranted for only the unexpired portion of the original warranty. This warranty does not cover failures or malfunctions resulting from: (1) Failure to properly install, operate or maintain the equipment in accordance with Camus® manual; (2) Abuse, alteration, accident, fire, flood, foundation problems and the like; (3) Sediment or lime buildup, freezing, or other conditions causing inadequate water circulation; (4) Pitting and erosion caused by high water velocity; (5) Failure of connected systems devices, such as pump or controller; (6) Use of non-factory authorized accessories or other components in conjunction with the system; (7) failing to eliminate air from, or replenish water in, the connected water system; (8) Chemical contamination of combustion air or use of chemical additives to water.

HEAT EXCHANGER

Within 10 years of the appliance having declared FOB from Camus®, a heat exchanger, shall prove upon examination by Camus® to be defective in material or workmanship, Camus® will exchange or repair such part or portion on the following pro rated limited warranty. Percentage shown is the amount that would be covered by Camus® Hydronics Limited if deemed warranty based on the number of years the boiler has been in service.

Years In Service	MicoFlame® Heating	MicoFlame® DHW	Years In Service	MicoFlame® Heating	MicoFlame® DHW
1	100%	100%	6	40%	N/A
2	100%	100%	7	35%	N/A
3	100%	100%	8	30%	N/A
4	100%	100%	9	25%	N/A
5	100%	100%	10	20%	N/A

The exchanged or repaired heat exchanger will carry the balance of the remaining original warranty provided with the appliance based on the FOB date. In the event a replacement heat exchanger is delivered and if the defective heat exchanger is deemed to be repairable by Camus® the repaired heat exchanger will be returned to the customer and a credit will not be issued. Heat Exchanger shall be warranted for (20) years of the appliance having declared FOB from Camus® against “Thermal Shock” (excluded, however, if caused by appliance operation at large changes exceeding 150°F between the water temperature at inlet and appliance temperature or operating at temperatures exceeding 230°F.

BURNER

If within FIVE years of the appliance having declared FOB from Camus® to be defective in material or workmanship, Camus® will exchange or repair such part or portion.

ANY OTHER PART

If any other part fails within one (1) year after installation, or eighteen (18) months of the appliance having declared FOB from Camus® whichever comes first Camus® will furnish a replacement or repair that part. Replacement parts will be shipped FOB our factory.

HOW TO MAKE A CLAIM

Any claim under this warranty shall be made directly to Camus® Hydronics Limited Canadian Head Office

SERVICE LABOR RESPONSIBILITY

Camus® shall not be responsible for any labour expenses to service, repair or replace the components supplied. Such costs are the responsibility of the owner.

DISCLAIMERS

Camus® shall not be responsible for any water damage. Provisions should be made that in the event of a water/appliance or fitting leak, the resulting flow of water will not cause damage to its surroundings.

Name of Owner	_____	Name of Dealer	_____
Address	_____	Address	_____
	_____		_____
Model No.	_____	Serial No.	_____
Date of Installation:	_____	Date of Initial Operation:	_____



CAMUS Hydronics is a manufacturer of replacement parts for most copper finned and stainless steel water heaters and heating boilers as well as a supplier of specialty HVAC products. Our service line is open 24 hours, 7 days a week! The CAMUS CERTIFIED! Seal assures you that Reliability, Efficiency & Serviceability are built into every single unit! For more information on our innovative products from CAMUS Hydronics Limited, call 905-696-7800 today!

